


PKM分解图

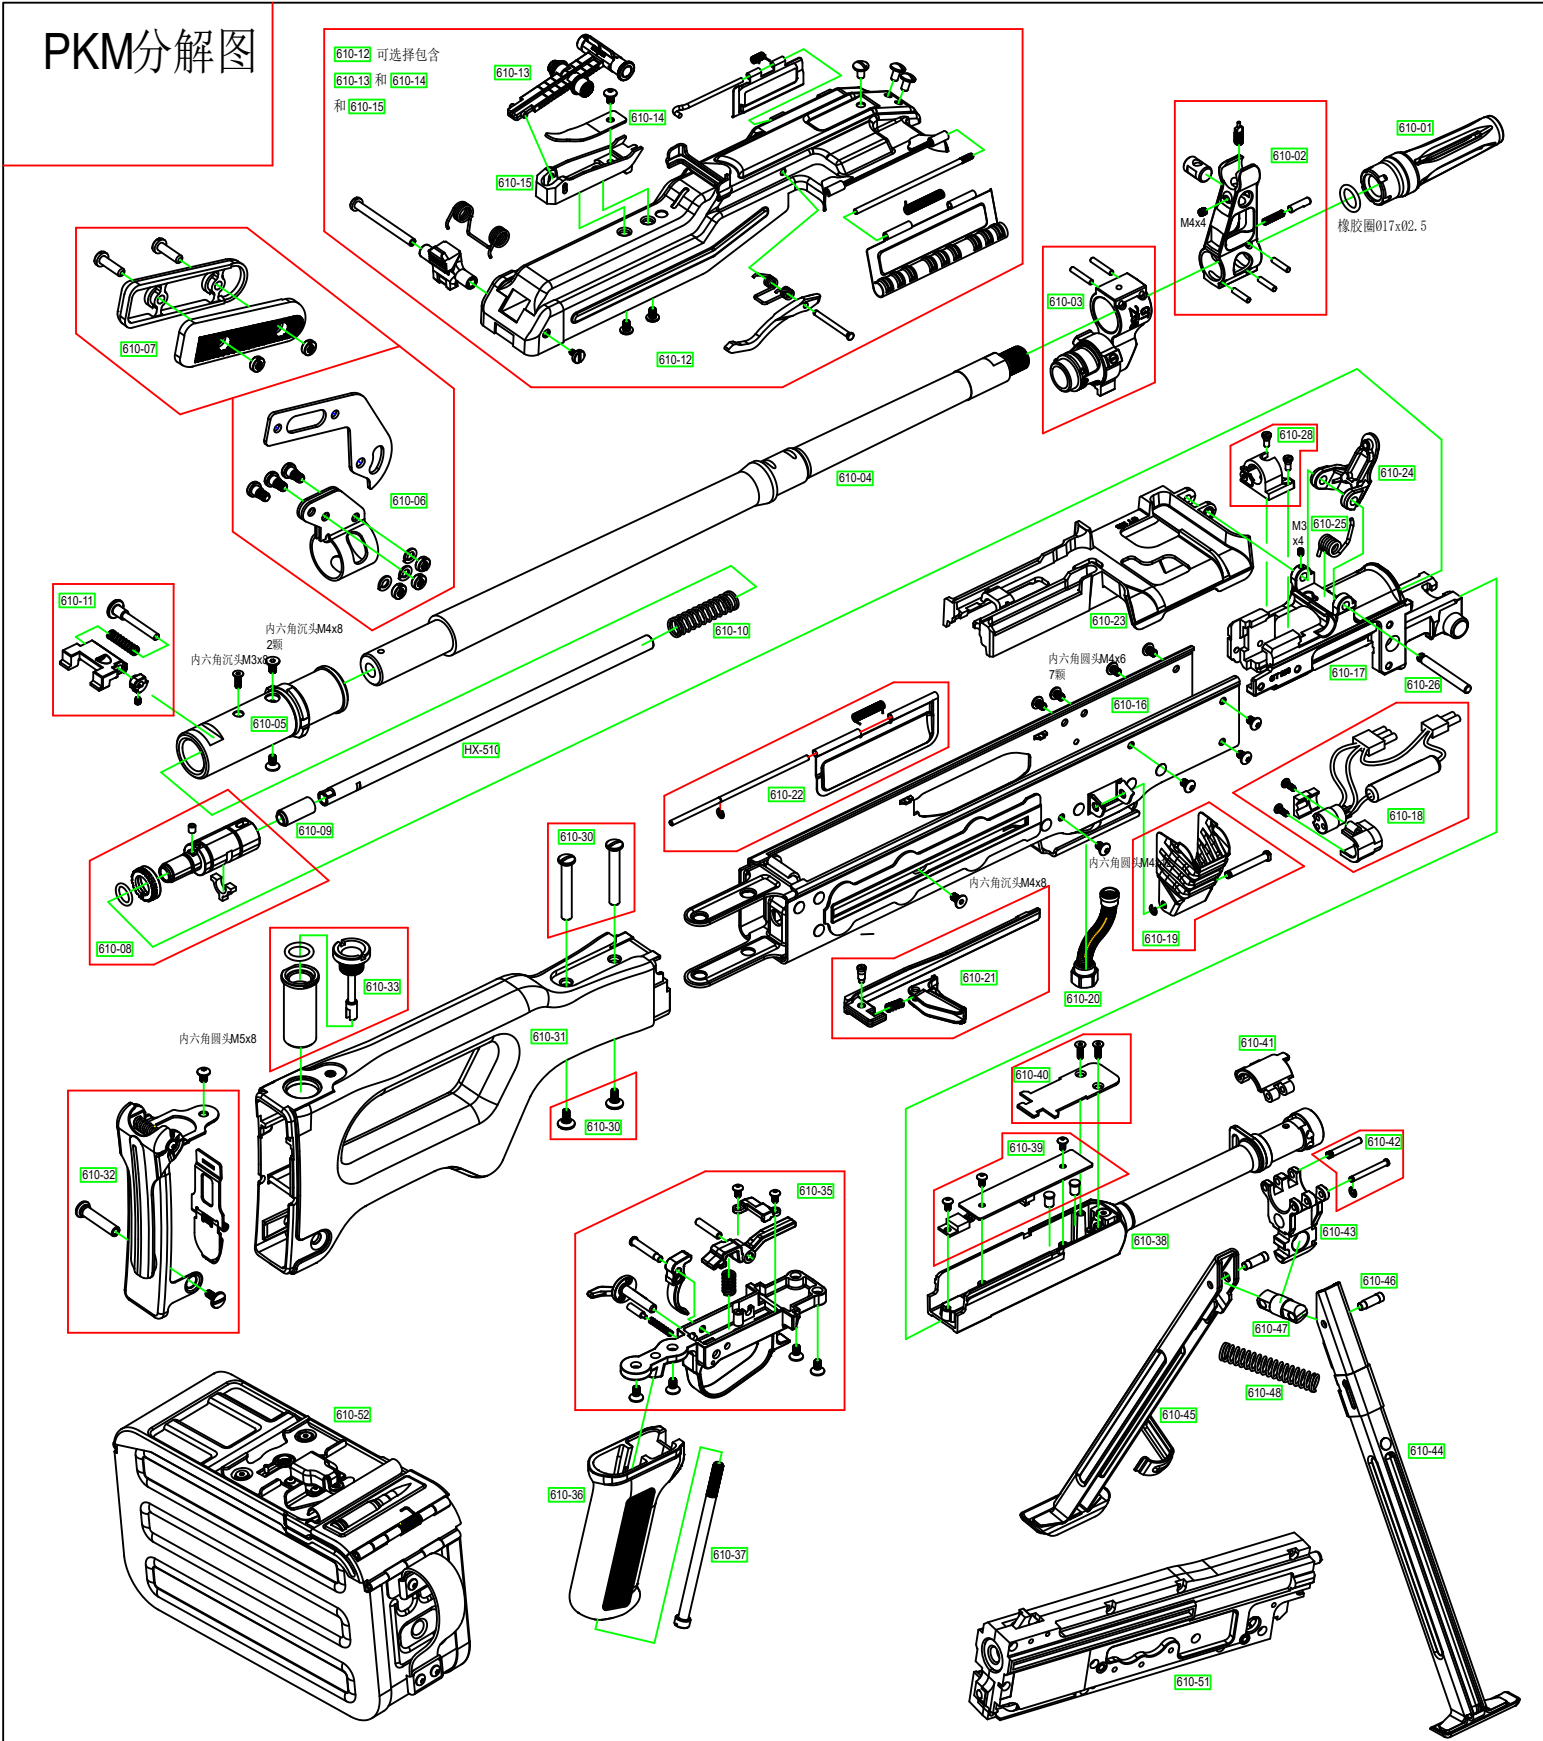

610-01	PKM防火帽 Compensator	610-17	主体连接件 Mostly joint	610-37	握把固定螺杆 Screw of lock grip
610-02	前瞄准器套装 Front sight post set	610-18	主体电线(带保险丝) Gun cord(with fuse)	610-38	活塞筒组件 Piston
610-03	气量调节套装 airy capacity set	610-19	右侧翻盖套装 Right cover	610-39	调速电路板套装(含螺丝) PCB of control speed(with screw)
610-04	外枪管 Outer barrel	610-20	上弹导管组件 Ball canal	610-40	定位弹片套装(含螺丝) Spring piece(with screw)
610-05	外枪管连接套 Outer barrel joint	610-21	上膛拉杆 Charging handle	610-41	脚架固定盖 Horse cover
610-06	铁环提手套装(含弹性垫圈) Ferreous carry handle(springgasket in)	610-22	左侧翻盖套装 Left cover	610-42	脚架固定插销 Pin of lock horse
610-07	塑料手柄套装 Plastic handle	610-23	弹链架 Chain shelf	610-43	脚架主体 Main body of horse
610-08	旋升枪膛调节套装 HOP-UP chamber set	610-24	上盖连接件 Upper cover joint	610-44	右侧支架组件 Right bracket
610-09	旋升枪膛套 HOP-UP chamber packing	610-25	上盖扭力簧 Torsional spring	610-45	左侧支架组件 Left bracket
610-10	黄铜枪管 Copper barrel	610-26	插销 Lock pin	610-46	支架固定销 Pin of lock bracket
610-11	枪管固定销块套装 The pin of peg outer barrel	610-28	枪膛定位底座组件 Base of chamber	610-47	支架转动销 Pin of circumgyrate bracket
610-12	受弹器盖套装 Upper cover	610-30	枪托固定插销套装 Pin of lock butt stock	610-48	支撑压簧 Support spring
610-13	后瞄准器组件(含螺丝、弹簧) Rear sign(include screw and spring)	610-31	塑料枪托(可换木质托) Plastic butt stock(can instead woody butt stock)	610-51	齿轮变速箱组件 Gear case assembly
610-14	后瞄准器弹片 Rear sign spring piece	610-32	枪托后盖 Back cover of butt stock	610-52	自动弹匣组件 Magazine assembly
610-15	后瞄准器底座 Base of rear sign	610-33	油瓶 Oil bottle		
610-16	主体机匣 Mostly receiver	610-35	扳机组件 Trigger assembly		
		610-36	PKM 握把 PKM Grip		