

電動氣彈槍

FULL· SEMIAUTO

CM.125

請仔細閱讀說明書



在操作之前必需讀熟這些說明書

Always read through this manual before operation.

警告 WARNING

18歲以上年齡才能使用
Only for 18 years of age or older

注意受傷防
Injury caution


注意熟讀警告指示手冊
Careful reading of Handling cautions instruction manual

18歲以上年齡才能利用這支汽槍比賽使用
Operation of this air gun for competition use is restricted to users of 18 years of age or older.

因為BB彈能達到30-40米範圍，不小心對射擊將可能導致眼睛受傷或其它傷害。
Since plastic BB bullets reach 30 to 40 meters, careless shooting may cause eye damage or other injuries.


在操作之前必需細心熟讀警告手冊和指示手冊操作汽槍時必須認好警告指示
Always read through this HANDLING CAUTION AND INSTRUCTION MANUAL carefully before operation.

操作這支汽槍時必須認好警告和指示。
Operate the air gun with full recognition of warnings and cautions.

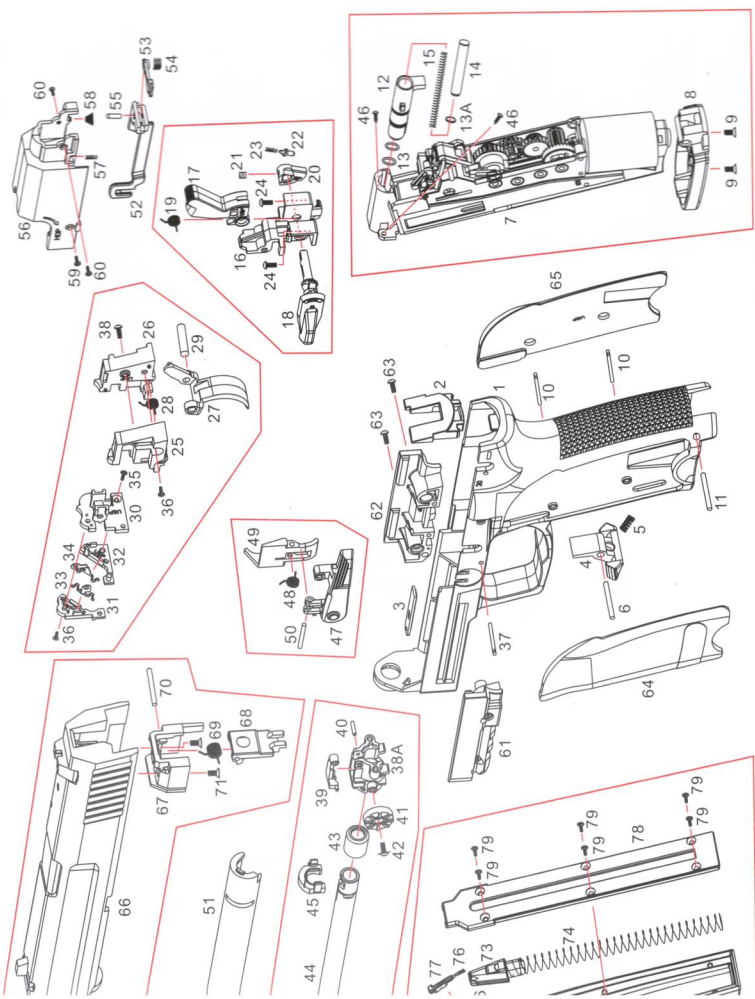

布件	Gun body	27 扳机	53 离合片	Clutch piece
装饰零件	Decorating parts	28 扳机扭簧	54 离合片簧	Spring
孔配件	Hole accessories for flashlight	29 扳机轴铜套	55 Ø2×5花轴	Ø2×5 shaft
生	Magazine button	30 电池座	56 过只罩	Hop-up cover
玉簧	Magazine button spring	31 电池座左盖	57 保险压簧	Safety spring
单性销	Ø3×16 spring pin	32 电池座右盖	58 单发回簧	Single shot spring
		33 电池座负极铜片	59 M2×12KMHO	M2×12 KMHO
		34 电池座正极铜片	60 M2×5KMHO	M2×5 KMHO
		35 Ø2×5KBHO	61 左鱼骨	Left rail
		36 M2×8KMHO	62 右鱼骨	Right rail
		37 Ø2×26单花铁轴	63 Ø3×10PTHO	Ø3×10 PTHO
		38 Ø2×4TBHO	64 左贴片	Left grip cover
		38A 过只	65 右贴片	Right grip cover
		39 过只调节件	66 拉手	Puller
		40 Ø1.5×8花轴	67 拉手扣座	Puller button base
		41 HOP调节钮	68 拉手扣件	Puller button
		42 Ø2×4PWAHO D=6	69 拉手扭簧	Puller spring
		43 过只橡胶	70 Ø2×21花轴	Ø2×21 shaft
		44 过只铜管	71 M2×5KMHO	M2×5 KMHO
		45 过只扣件	72 弹匣主体	Magazine main body
		46 Ø2×6PAHO	73 升弹头	Lifting warhead
		47 电池卸件座	74 扁压簧	Spring
		48 电池卸座扭簧	75 左嘴卡件	Left block
		49 电池卸件	76 弹匣嘴压簧	Magazine mouth spring
		50 Ø2×12.5 shaft	77 右嘴卡件	Right block
		51 枪外管	78 弹匣盖	Magazine cover
			79 M2×6KMHO	M2×6 KMHO


电池与充电器 ACCUMULATOR AND CHARGER

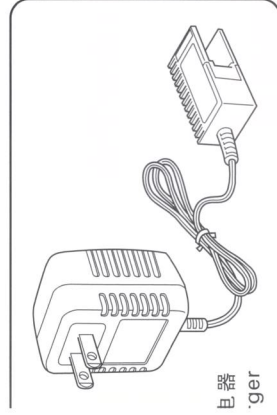

充电器
charger


将电池插入充电器
Insert the battery into the jack.

部件名称 NAME OF EACH PARTS

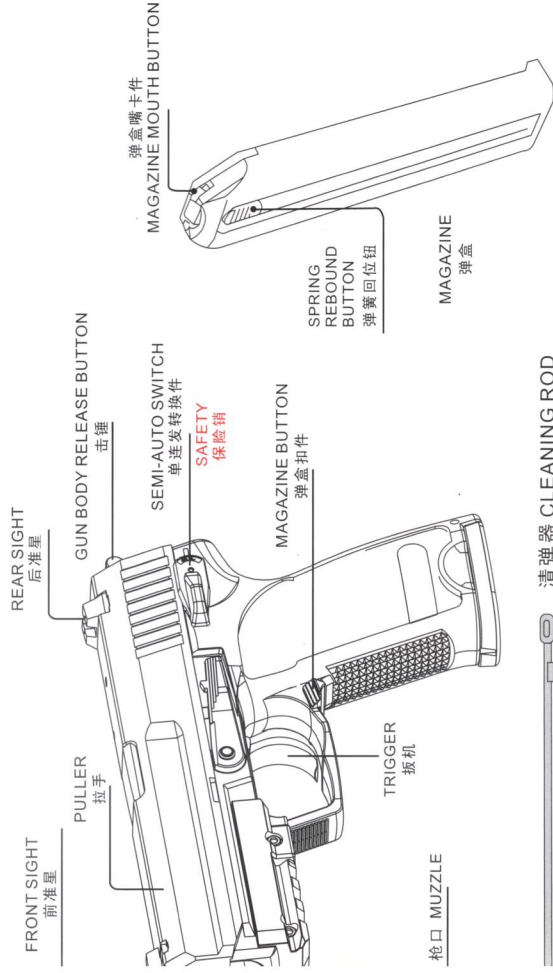


3 装电池 INSTALL THE BATTERY


- 1 Press the gun body release button to unload down the puller.
用手指按下击锤卸下拉手。

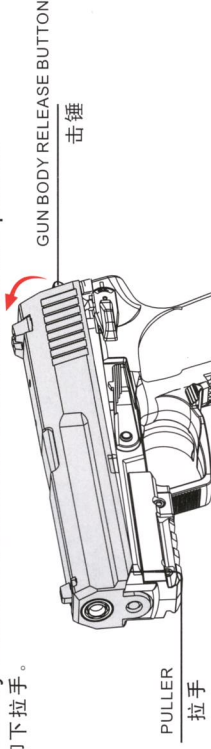



- 2 Load the full-charged battery in to its position.
将充满电的电池装上。

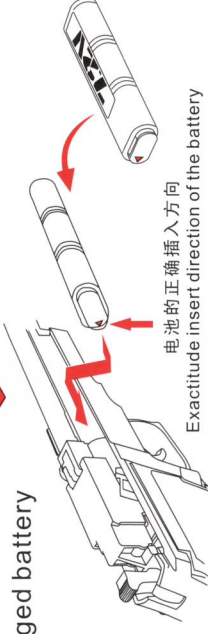

- 3 Fix on the puller reversely to step 1.
将拉手按 1 反向操作装回拉手。

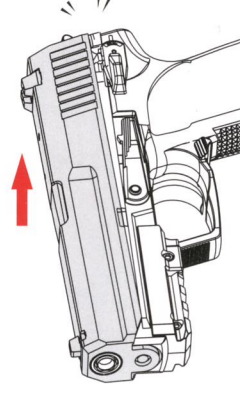


4 单发/连发 SINGLE \ RUNNING SHOOT

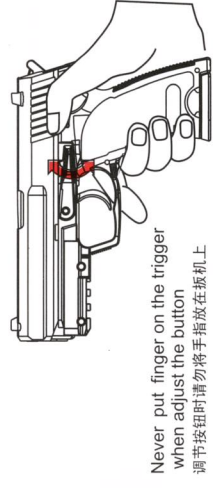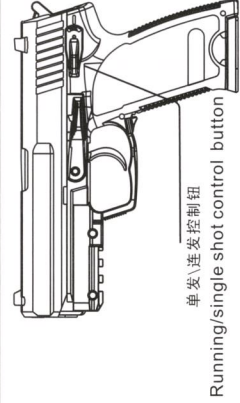


Single shoot position < ● > 单发位置	Single shoot: the button point upward, one bullet shoot out one time. 单发: 将按钮拨向单发位置, 射击时每次只发一弹
running shoot position < ● ● > 30 连发位置	a running shoot: the button point downward, more bullets shoot out one time. 连发: 将按钮拨向连发位置, 射击时可连续发射多弹

保险销 SAFETY

- KEEP THE SAFETY AT "SAFE POSITION" WHEN THE GUN IS UNUSED.

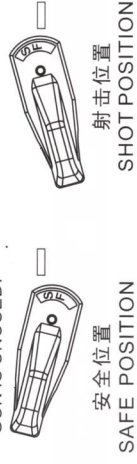

- USE THE FIRST FINGER TO PULL THE TRIGGER
用食指扳动扳机
NEVER PUT THE FINGER ON THE TRIGGER BEFORE SHOOTING
射击前切勿将手指放在扳机上。

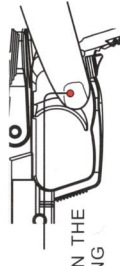


5 安装\拆卸弹仓 INSTALL\DISASSEMBLE THE MAGAZINE

- ① PRESS THE MAGAZINE RELEASE BUTTON TO RELEASE THE MAGAZINE.
按住弹仓拆卸按钮拆卸弹仓。


弹仓拆卸按钮
MAGAZINE
RELEASE BUTTON



- ② LOAD 6MM BB BULLETS INTO THE MAGAZINE.
装入6MM BB弹。

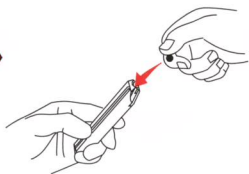


- ③ PUSH THE MAGAZINE INTO THE GUN TILL A CLICK SOUND HEARD.
将弹仓推入枪身直至听到“喀嚓”一声。

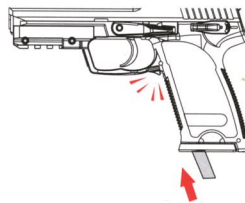

- Adjust the parabola direction with HOP-UP.


通过调节 HOP UP 调节钮
调节抛物线的方向

THE PARABOLA
REGULATE BUTTON
抛物线调节钮

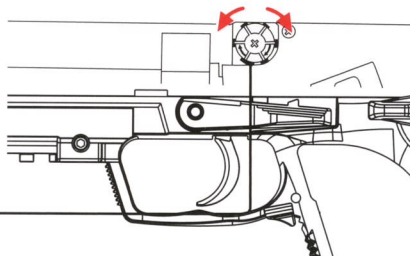

- The best position is where the bullets fly horizontally, and the longest range is obtained.

保持水平方向的射击能够使BB弹获得最远射程。

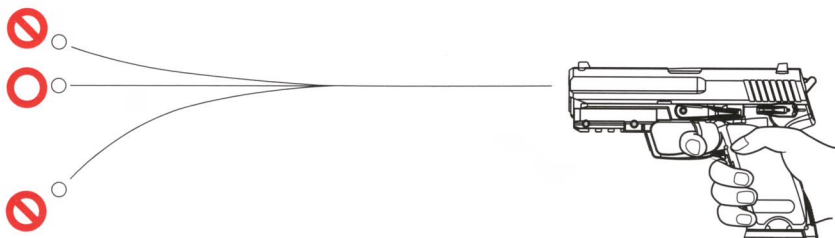



警告·注意

- Our company will not be responsible for trouble caused by using the bullet produced by other company.

我公司不对使用其它公司BB弹产品而引起事故负责。

- The bunglesome bb bullet is damage with the gun. Please use the precision bb bullet of our company.

 
拙劣的BB弹会对枪支造成严重损害，请使用我公司的标准BB弹系列产品。

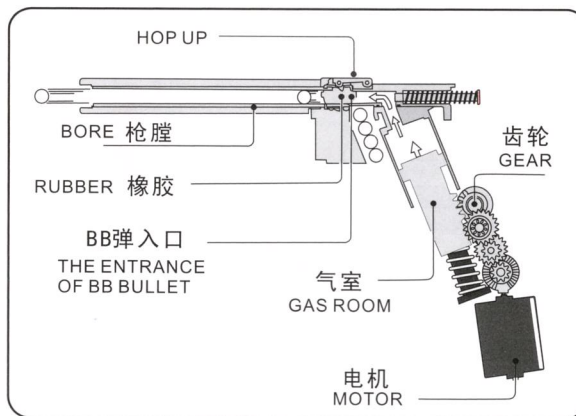

6 射击 SHOT



① Set semi-auto switch in semi or auto position.

将单连发转换件拨在单发或连发位置。

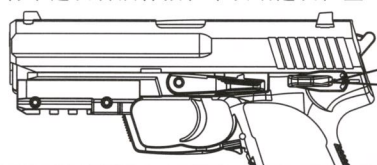


SINGLE SHOT

  RINNING SHOT




② PULL THE TRIGGER TO SHOT.

扣动扳机射击。

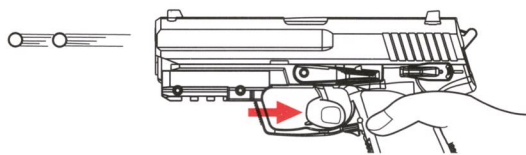


7 清除阻塞BB弹 REMOVE CLOGGED BULLETS

1 清通枪膛 CLEAN THE BORE

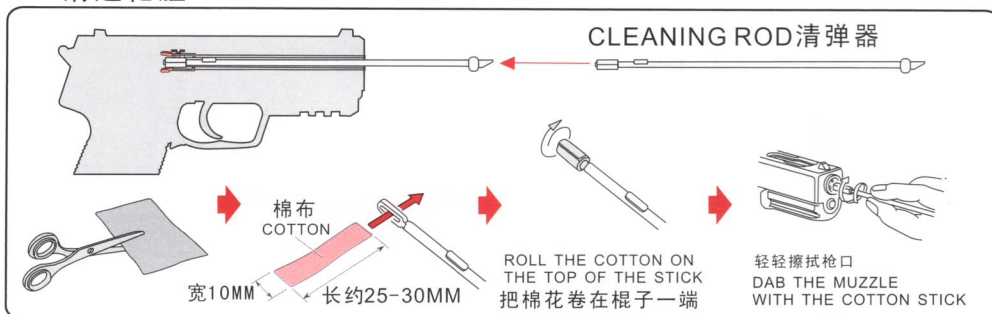


2 清除阻塞BB弹 REMOVE CLOGGED BULLETS

① Unload the magazine, insert rod into the barrel as picture showing.
退出弹盒, 将清弹器如图所示沿枪口插入。

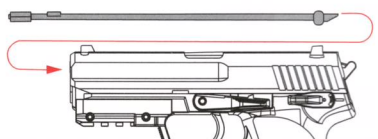


② REMOVE THE CLOGGED BULLETS.
清除阻塞的BB弹。

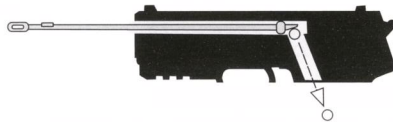

3 电机的微调 ELECTRICAL ENGINEERING OF TINY ADJUST

ONLY WHEN THE MOTOR NOISE BECOMES HIGH AFTER OPERATIONS FOR A LONG PERIOD OF TIME, CONDUCT THE FINE ADJUSTMENT AS SHOWN.

若使用时间过长, 电机发出很大的噪音时, 请按如图所示对电机进行微调。

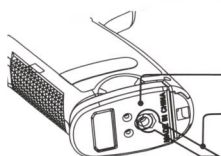

COVER 盖子

HEXAGON RING SPANNER
内六角扳手