

Installation of Gen2 Tru-Hop Bucking


TruSight Airsoft LLC
10/22/2016

Step 1

- ▶ Align the bucking and slide it straight onto the barrel. A little bit of lubrication may be applied to the barrel if the bucking does not slide easily.




Note: The following may be used as a lubricant: silicone oil/grease, white lithium grease, mineral oil, vegetable/corn oil.

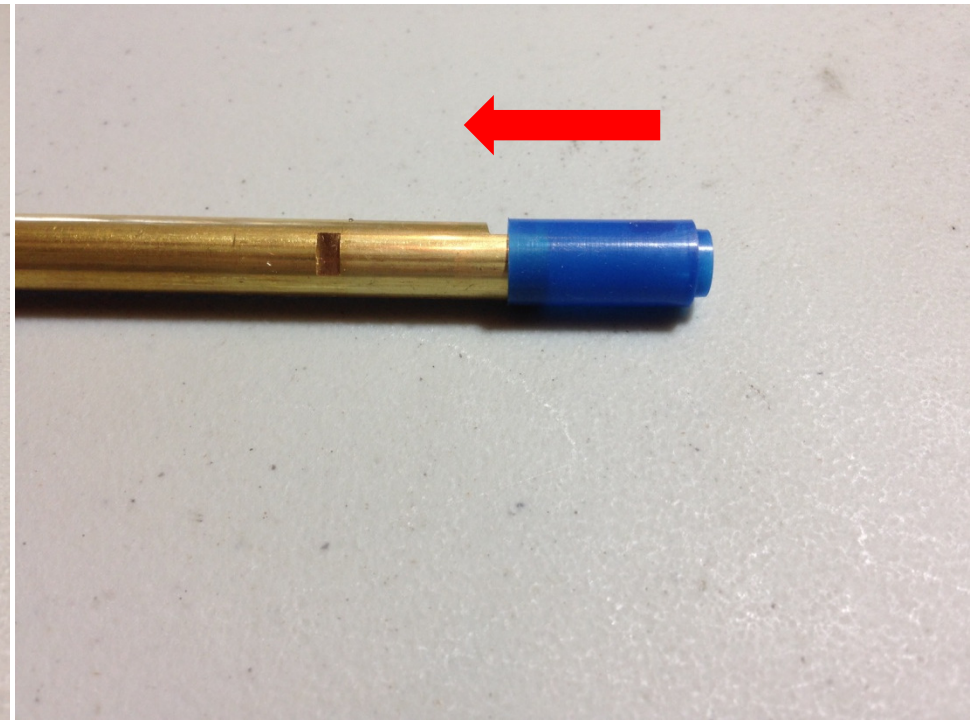

Step 2

- ▶ Care must be used when seating the internal contact patch of the bucking inside of the barrel window. Use your index finger and thumb to pinch the sides of the bucking and push upward and then over to clear the breach ring on the barrel. This will prevent damaging the internal contact patch of the bucking during installation.

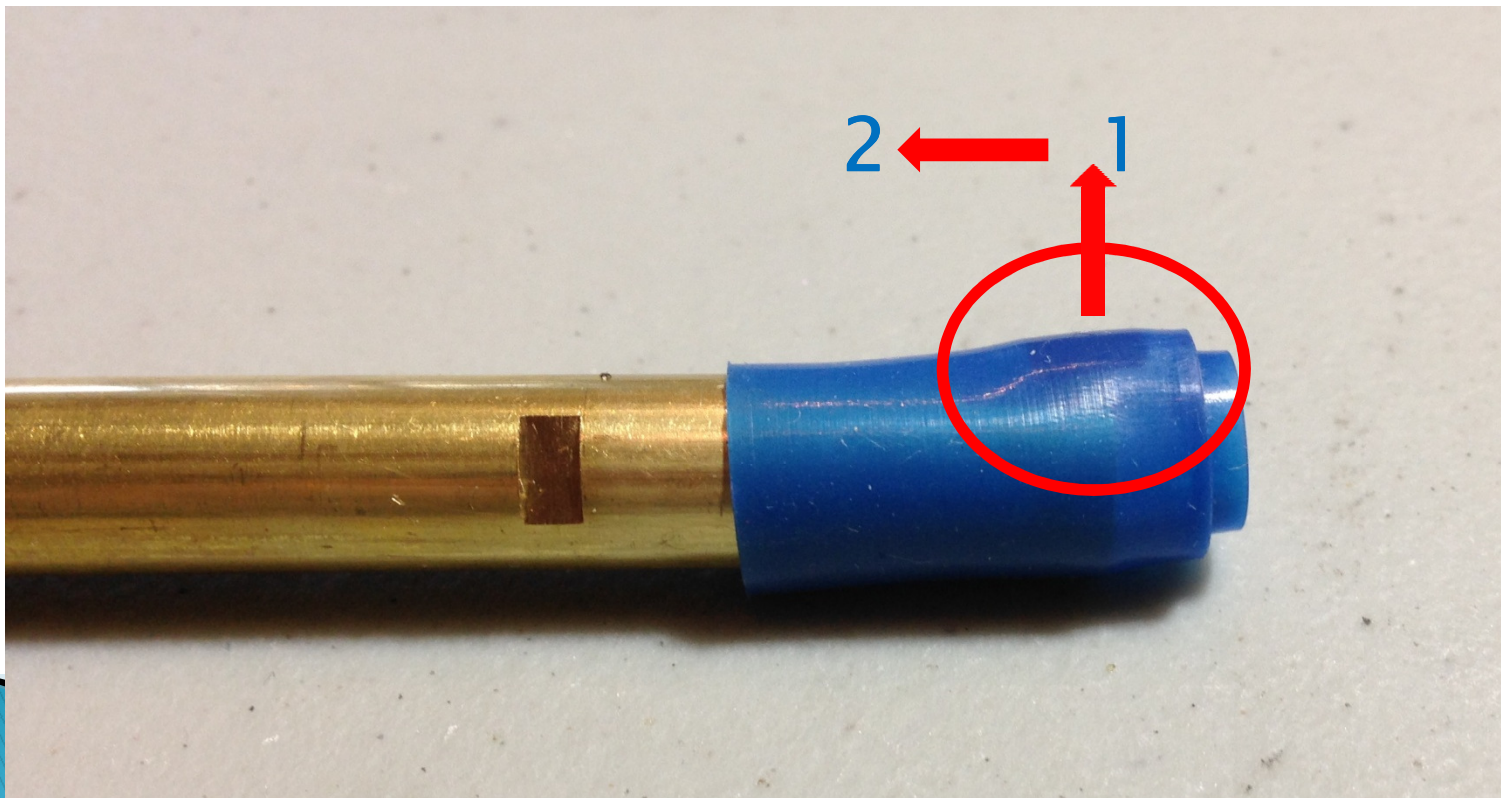

Step 3

- ▶ Once the internal contact patch is fully seated, check the bucking for alignment. Make sure everything, particularly the contact patch, is properly aligned.
- ▶ Next test-fit the bucking inside of the hop-up chamber. If the fit is snug or tight, then the installation is complete. If the fit is loose, then please proceed to the next step.




Step 4

- ▶ Teflon tape can be used to add thickness to the bucking for a better seal.
- ▶ Begin at the front of the bucking and wrap evenly in a spiral pattern towards the back (nozzle end).




Step 5

- ▶ Wrap one more layer of teflon tape by repeating the spiral pattern and working towards the front of the bucking (muzzle end).
- ▶ The final wrap should be half on the bucking and half on the barrel.
- ▶ Pinch off the teflon tape and press the loose end against the wrapped teflon tape.

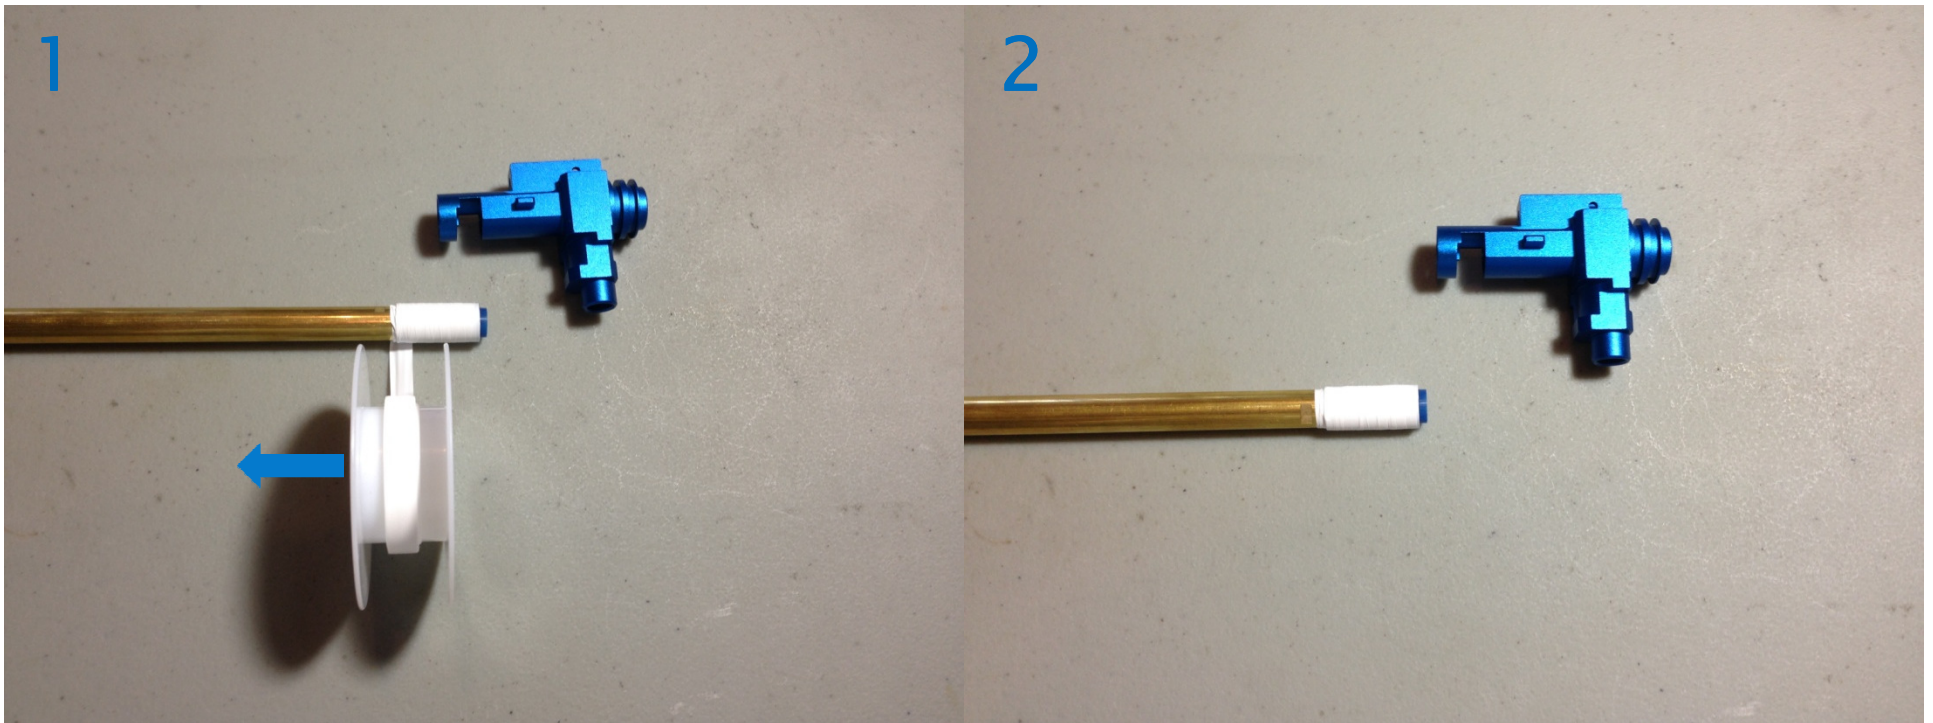


Step 6

- ▶ Perform another test-fit with the hop-up chamber. If the fit is still too loose, then add one more layer of teflon tape. Otherwise, a snug fit indicates that the installation is complete.
- ▶ The fit should be tight enough such that the chamber does not slide off of the bucking and barrel when held vertically.

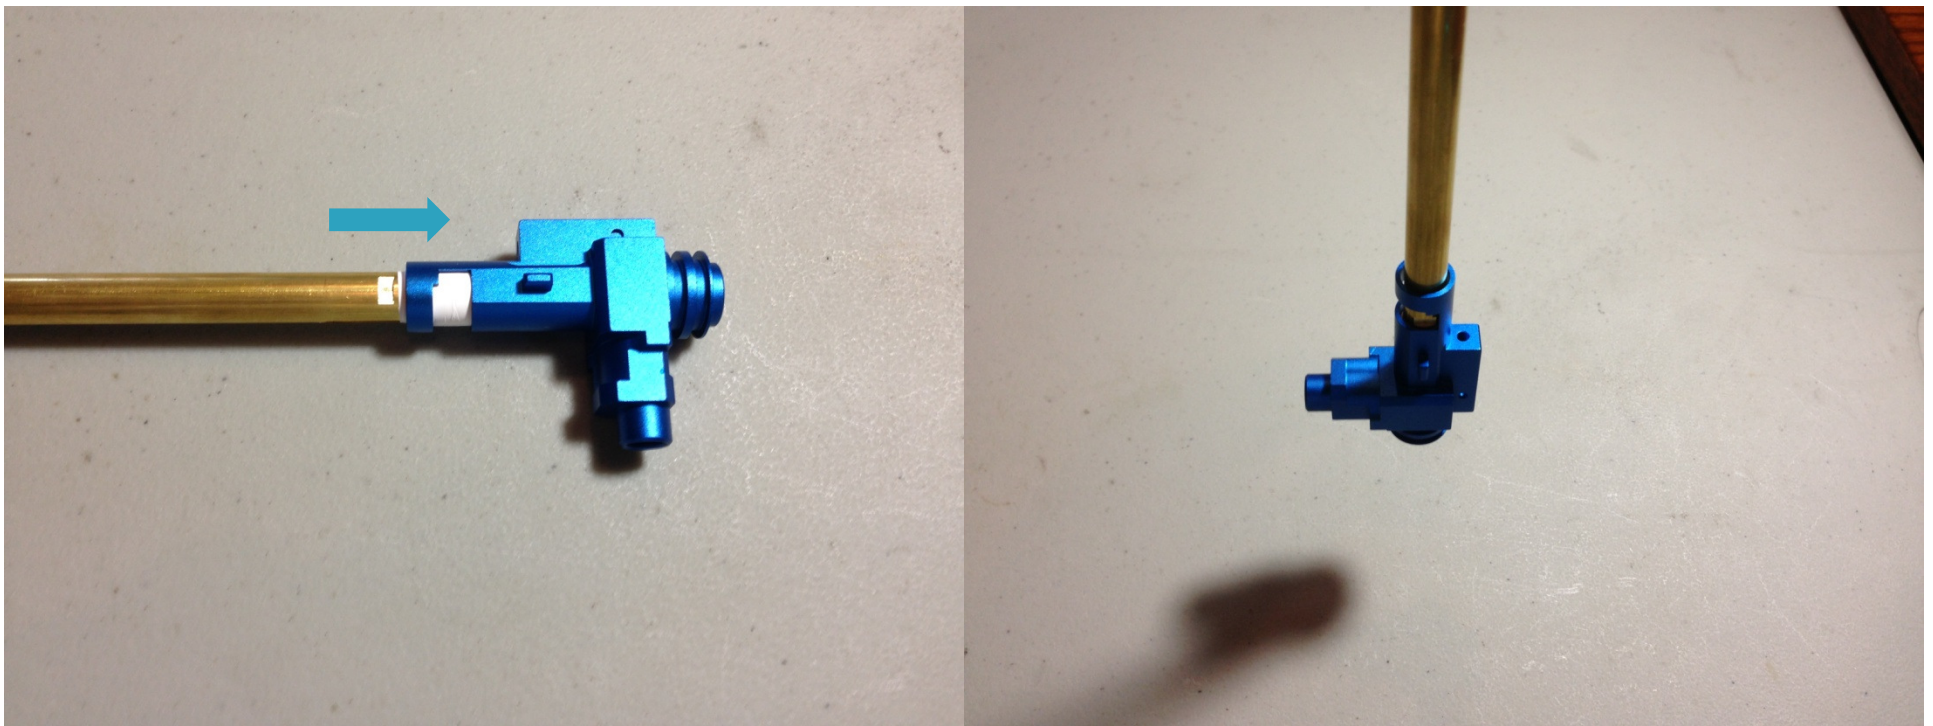

Uninstalling

- ▶ To uninstall the Tru-Hop from the barrel, follow these instructions in reverse order.
- ▶ Be sure to pinch the internal contact patch up and out when removing the bucking to avoid damage with the breach ring on the barrel.

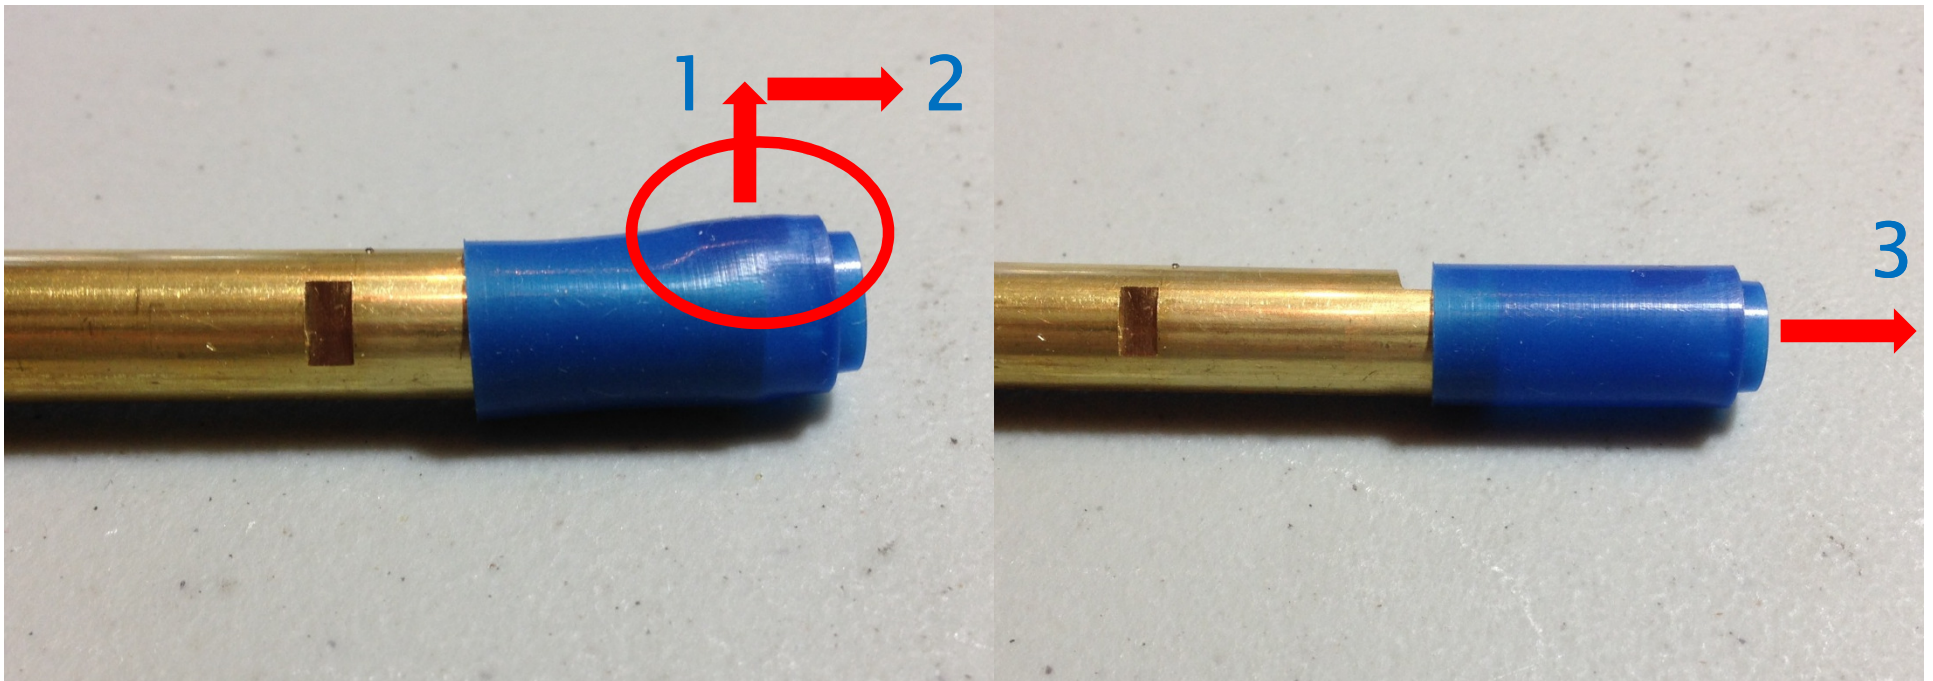

Questions?

- ▶ For help and support, please kindly contact us at TruSightAirsoftUSA@gmail.com
- ▶ Thank you!