



ICS-L85/L86 INSTRUCTIONS

85 SERIES


1

各部名稱 Component names



ICS-85

Proline

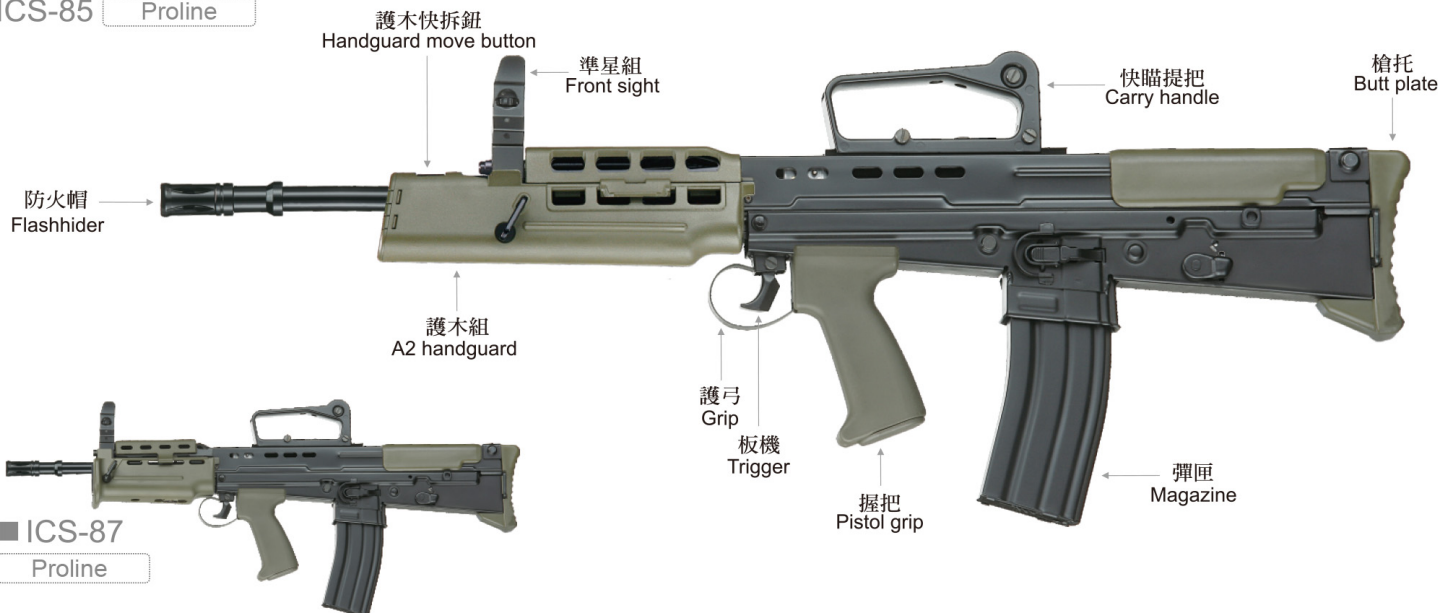

ICS-87

Proline

ICS-86

Proline



ICS-85

ICS-86

ICS-87

Length	:786.5(mm)	:912.8(mm)	:740(mm)
Barrel length(mm)	:480	:550	:420
Muzzle velocity	:120 m/s(360fps)	:120 m/s(360fps)	:120 m/s(360fps)
Weight(g)	:3652	:4411	:3090
Battery type	:8.4V 3300mAh MC-131	:9.6V 1500mAh MC-133	:9.6V 1500mAh MC-133
Connector size	:Small connector	:Small connector	:Small connector
Mag. capacity	:450	:450	:450
Spring	:M120	:M120	:M120
Material	:Full metal	:Full metal	:Full metal
Motor axle	:Short	:Short	:Short




WARNING 警告

電槍使用之注意事項 Maintenance

1. 請勿使用回收及劣質的 B.B 彈，以減少槍管損耗與避免卡彈的情形發生。
2. 如發現有卡彈的情形，應立即停止射擊，如卡彈後再勉強射擊，則會增加齒輪損耗。請使用內附通槍條，將卡彈清除後才可繼續使用。若完成通槍基本故障排除後仍無法使用時，請回原採購店家或專業經銷商尋求維修服務。
3. 使用前請先確定您的電池已充滿電，當使用中發覺電池即將用盡或射擊速度降低時，應立即更換電池。
4. 請定期使用通槍條清潔槍管，以保持槍支射擊時的準確性及減少卡彈的情形發生。
5. 請勿經常空槍射擊，以減少 BOX 及齒輪不必要的損耗。

1. Use high quality BB's to prevent further damage to the AEG and to stop jams.
2. When a BB is jammed, take the cleaning rod that came with your gun and push it into the barrel moving down gently until the jammed BB comes loose.
Note: The barrel does not need to be removed from the gun before unjamming a BB.
3. To keep the outer appearance maintained, wipe down the gun with a soft cloth.
4. Do not dry fire the gun at any time to reduce damage to the gear box.
5. After playing, remove the magazine, switch to single shot mode and fire one shot to release the spring within the gearbox. Finally disconnect the battery. Clean and lubricate your AEG before storage, as needed.

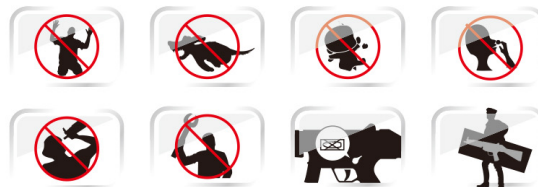

The parts/accessory for each model will have a bit difference, it's depend on the actual goods.

*每一款槍型基本配備不同依實際出貨為主

1. Battery type recommended, not included.
2. For different requirements and regulations in various market and area, the specifications may be revised on demand, and the AEG actually fetched shall prevail.




一芝軒企業有限公司 www.icsbb.com
I CHIH SHIVAN ENTERPRISE CO., LTD.

TEL:886-4-25256461 FAX:886-4-25256484



Always read through this manual before operation user restricted to 18 year of age or older

2 裝電池方法 Battery fitting method

ICS-85

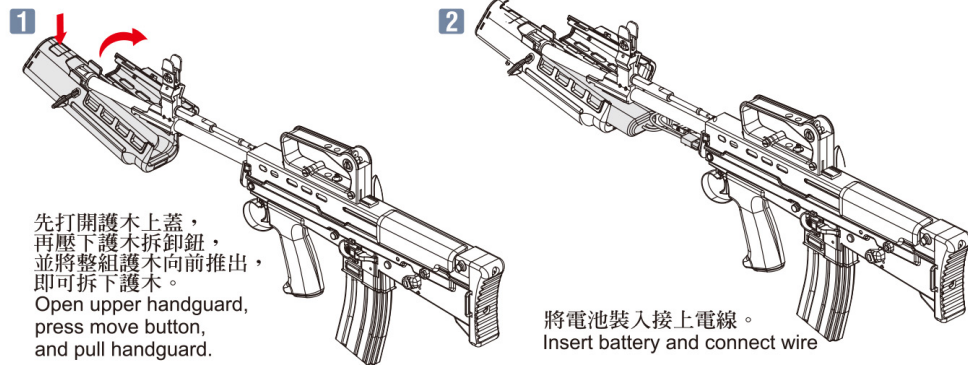

ICS-86/ ICS-87

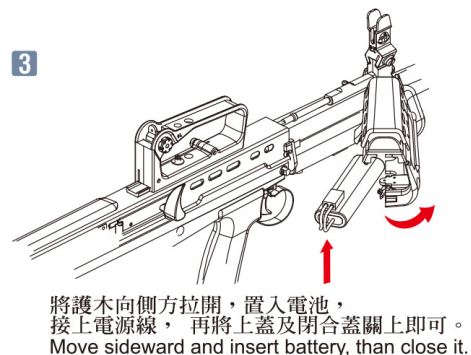
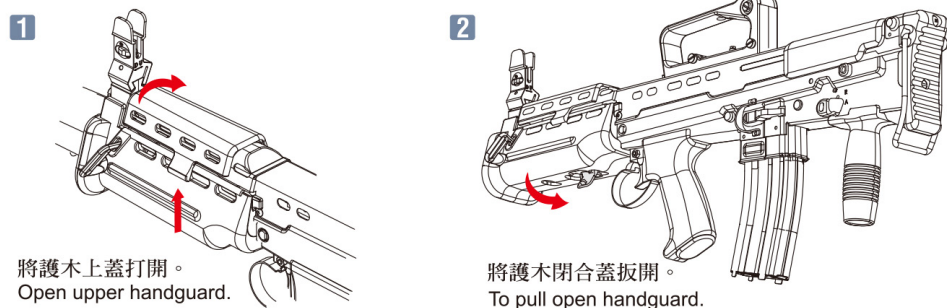


3 齒輪箱拆解 Disassemble Gear-box




注意 CAUTION


※重新組裝時，必須依反向動作組合
Reassembly is the reverse of disassemblys procedures.

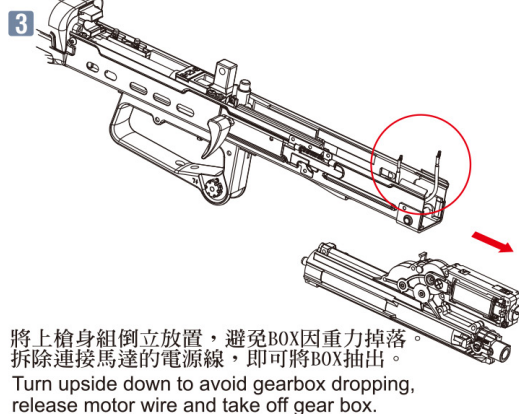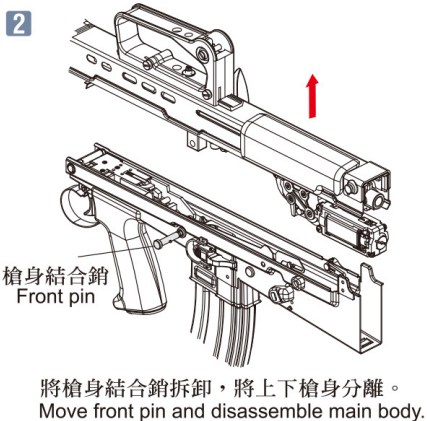



4 腳架說明 Bipod ICS-86

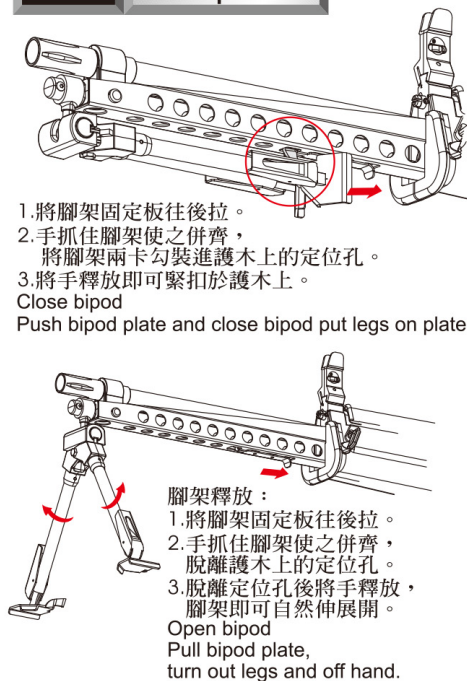

5 活塞簧力微調 Spring adjustment

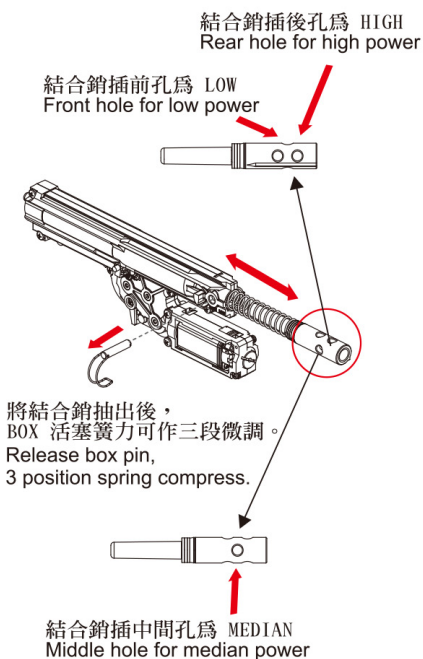

6 保險切換 Safe convert

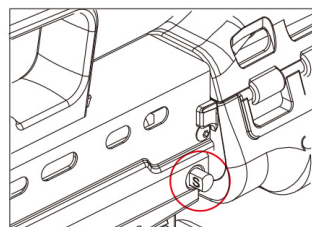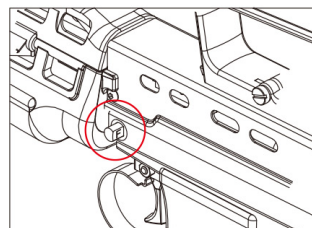


7 Hop Up彈道調整 Hop Up adjustment

槍機固定在後：

1. 將槍機拉柄往後拉到底，
2. 將槍機釋放鈕往左撥，再微放槍機拉柄，可使槍機拉柄固定在後。此狀態即可進行hop up調整。
3. 再快速拉動一次拉柄，即可進行釋放槍機動作。

Move charging to end and pull up the charging pin, after adjust hop up, pull back charging it will go forward.

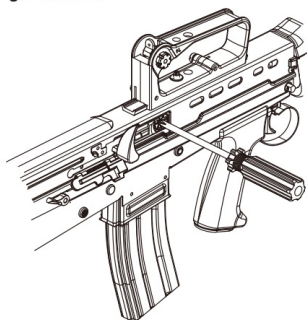

正確
Best
trajectory

上飄 Decrease Hop adjustment

下墜 Increase Hop adjustment

調整方法：

1. 將hop up往後旋轉調整，即可使BB彈往上飄。
2. 將hop up往前旋轉調整，即可使BB彈往下墜。(亦可使用十字起子進行調整動作。)

Adjustment procedure:

1. Backward Hop up, pellet will float up.
2. Forward Hop up, pellet will fall down. (also can use cross screw driver)

8 彈匣使用方式 Magazine attachment

8-1 裝BB彈方式 load BBs


建議使用ICS 6mm BB彈
Suggest to ICS 6mm BBs



將彈匣上蓋依箭頭方向推開再倒入B.B.彈
Open the cover to load BBs. Please use ICS 6mm caliber BBs for optimum Performance.


依箭頭方向旋緊彈匣底下旋鈕，即可將B.B.彈順利送出。
To charge BB feed spring, please wind magazine.

8-2 彈匣上下方式 Magazine loading and unloading

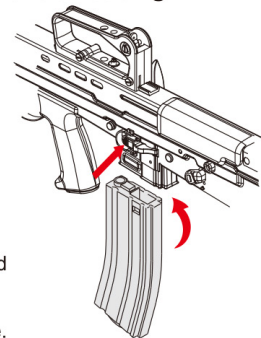

按下彈匣卡榫即可將彈匣裝入或拆下
Press the magazine release lever to load or unload the magazine.


9 馬達間隙調整 Fine adjustment of gear engagement

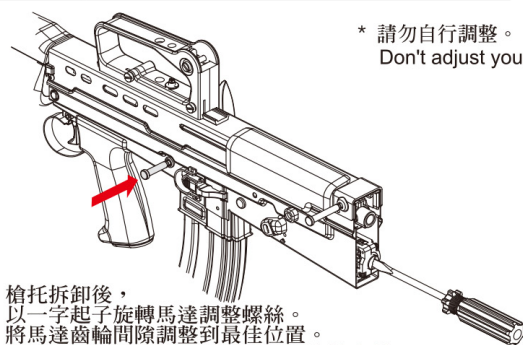

* 請勿自行調整。
Don't adjust yourself.

槍托拆卸後，以一字起子旋轉馬達調整螺絲。將馬達齒輪間隙調整到最佳位置。調整完畢，將槍托裝回原處，插入結合銷。
After release butt plate, use screw driver to adjust, when finish adjusting, close the plate.

10 提把拆卸 Disassemble carry handle

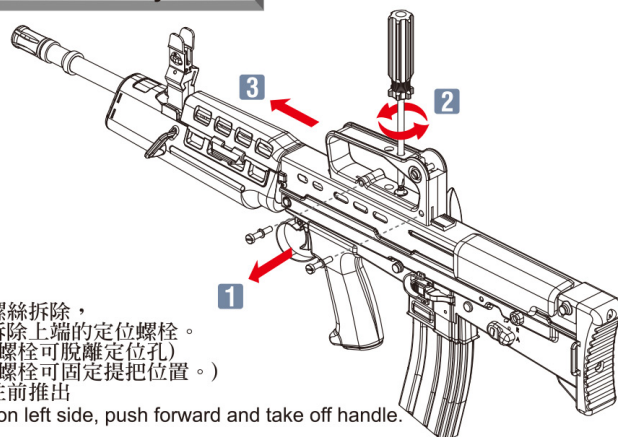


提把拆卸：

1. 將側邊兩顆螺絲拆除，
2. 以十字起子拆除上端的定位螺絲。(往上旋轉定位螺絲可脫離定位孔。)(往下鎖固定位螺絲可固定提把位置。)
3. 將整組提把往前推出


Release 2 pins on left side, push forward and take off handle.

 11 通槍條使用方式 How to use a cleaning rod




將通槍條插入並旋轉及前後拉動以清理內管。
Insert cleaning rod, turn left and right, move back and forward.

12 準星高度調整 Bear sight and front sight adjustments

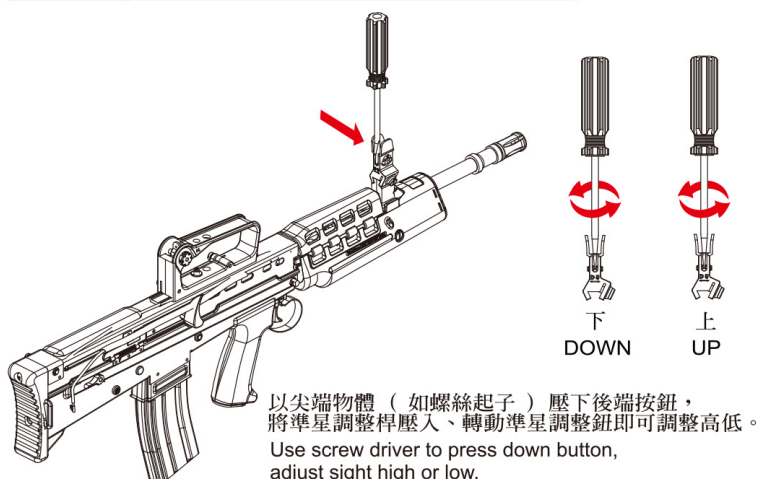


以尖端物體(如螺絲起子)壓下後端按鈕，將準星調整桿壓入、轉動準星調整鈕即可調整高低。
Use screw driver to press down button, adjust sight high or low.

13 單連發選擇方式 Selector lever and safety setting

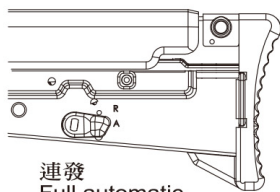

連發
Full automatic

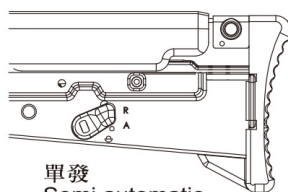

單發
Semi automatic

14 規孔左右調整 Rear sight and adjustments

遠距：將規孔往前推

Forward

Far destination :move sight forward




近距：將規孔往後推

Backward


Close destination :move sight backward

順時針旋轉則規孔往右移

逆時針旋轉則規孔往左移

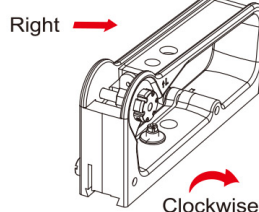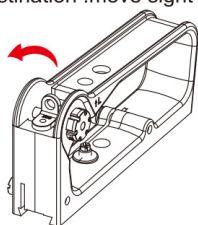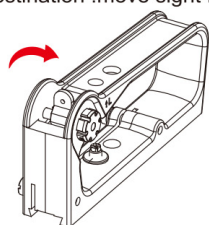

Clockwise

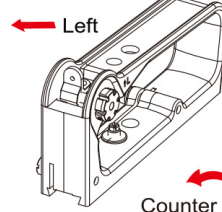


Counter clockwise




15 各部零件説明 Description

■ ICS-85 / 86 共用零件
Compatible component

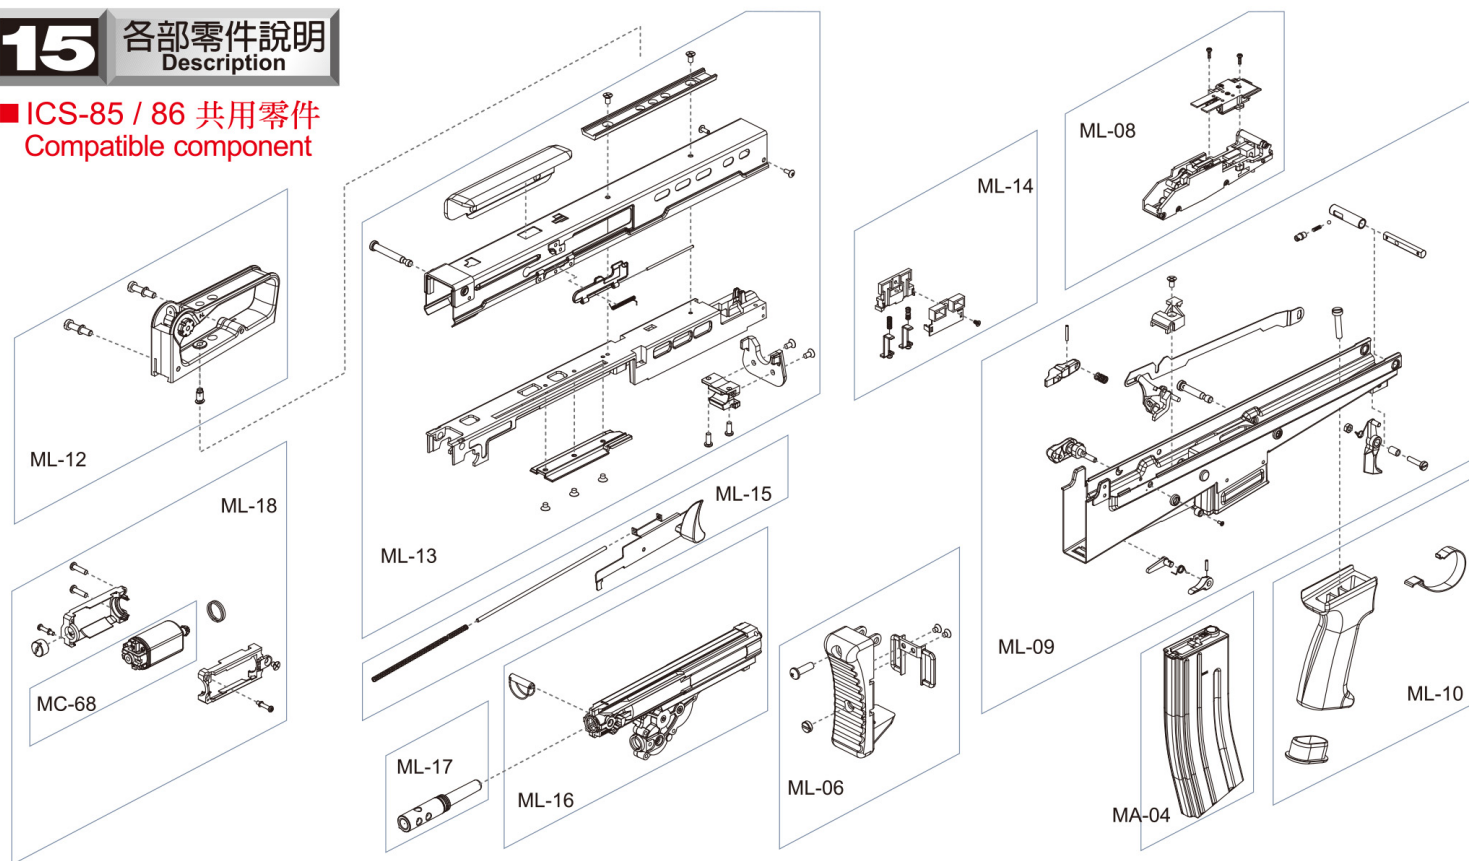

■ ICS-85

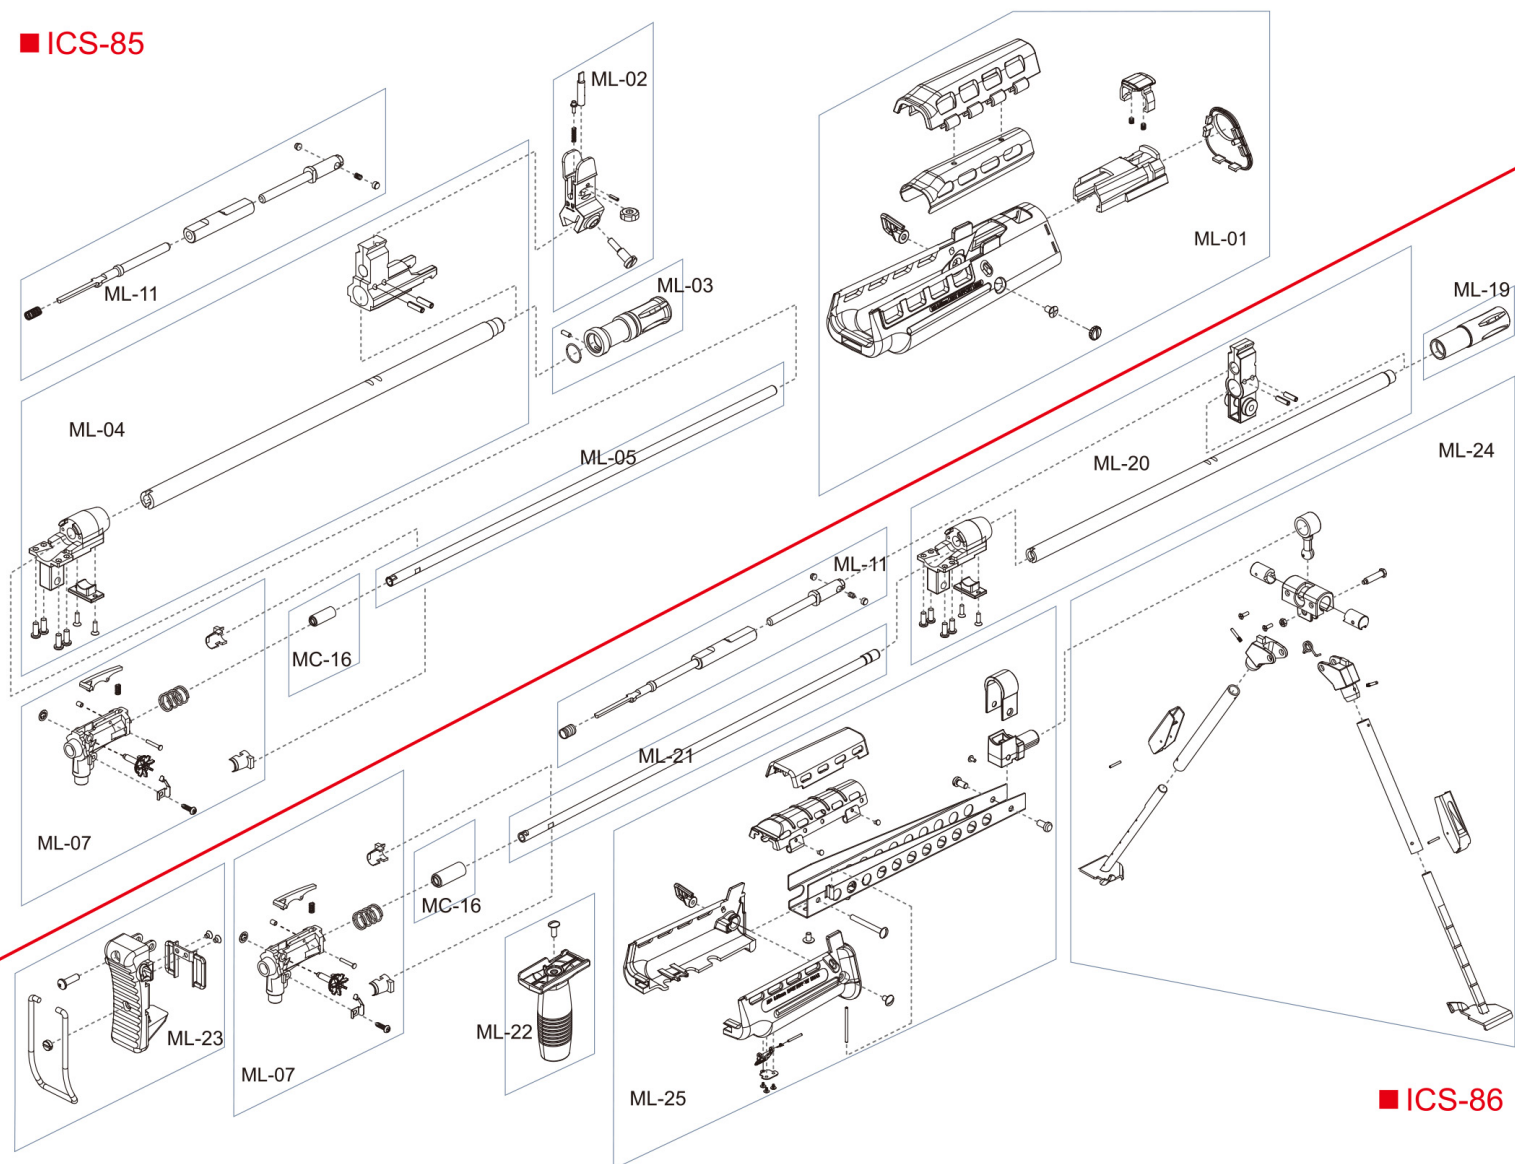

■ ICS-86