

電動手槍

AUTO ELECTRIC GUN

CM.121

Users restricted to
18 years of age or older
使用年龄对象18岁以上




HOP UP
VERSION

在操作之前必需读熟这些说明书
Always read through this manual before operation.


《完成品》



电池与充电器 ACCUMULATOR AND CHARGER

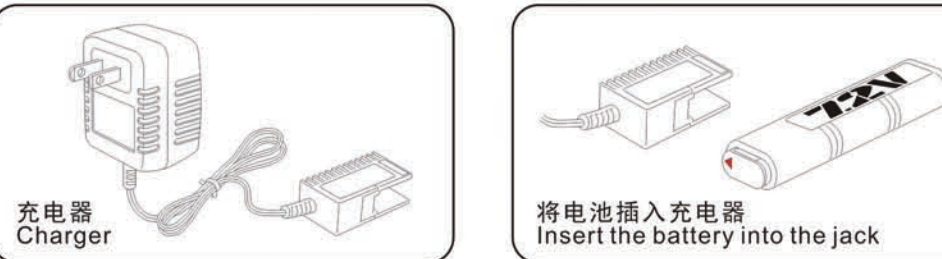


1.各部分名称 NAME OF EACH PART

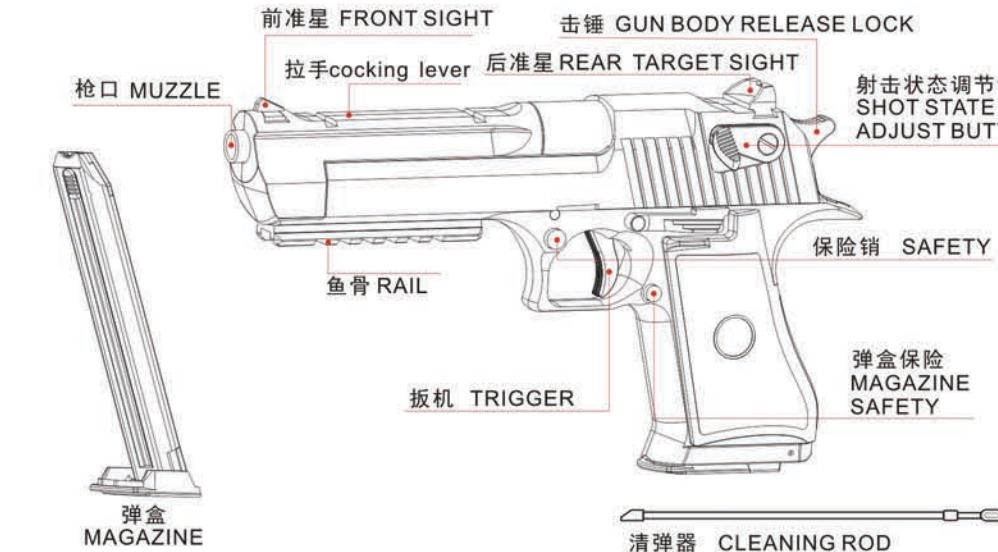


2.保险销 SAFETY




3.充电池 ACCUMULATOR

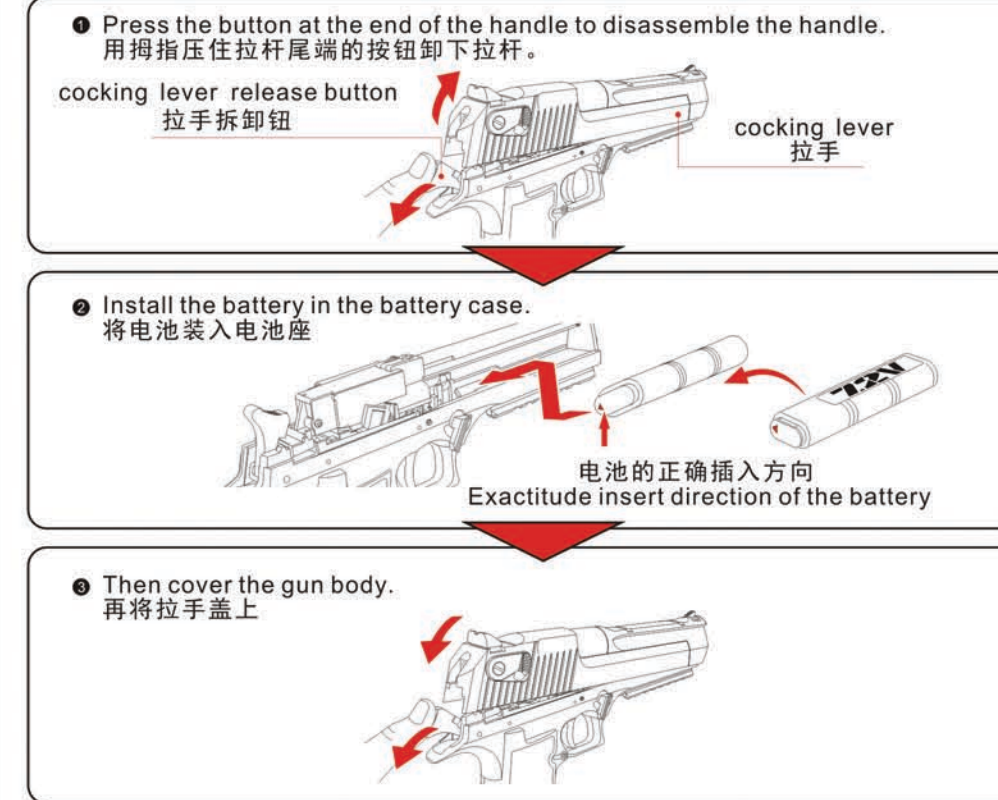


4.单发\连发 SINGLE\RUNNING SHOOT

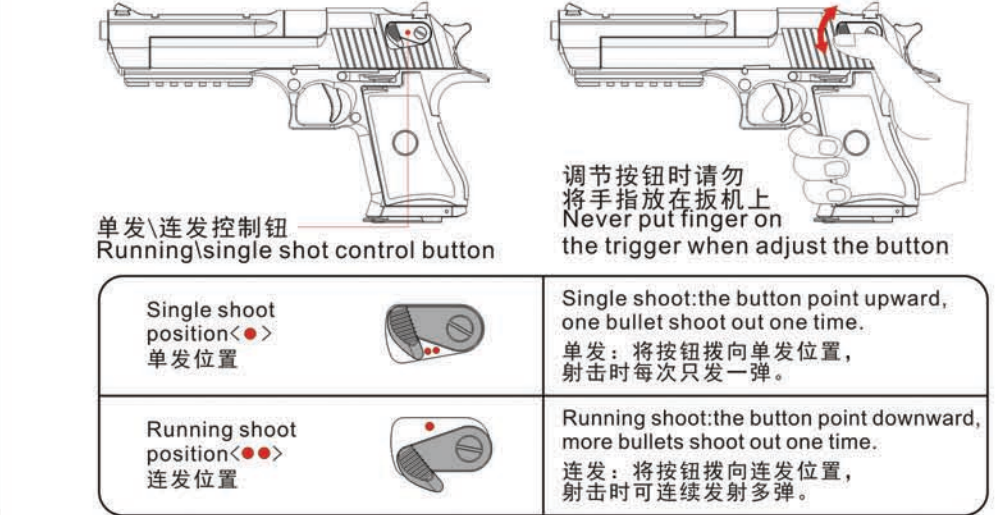

5.安装\拆卸弹仓 INSTALL DISASSEMBLE THE MAGAZINE

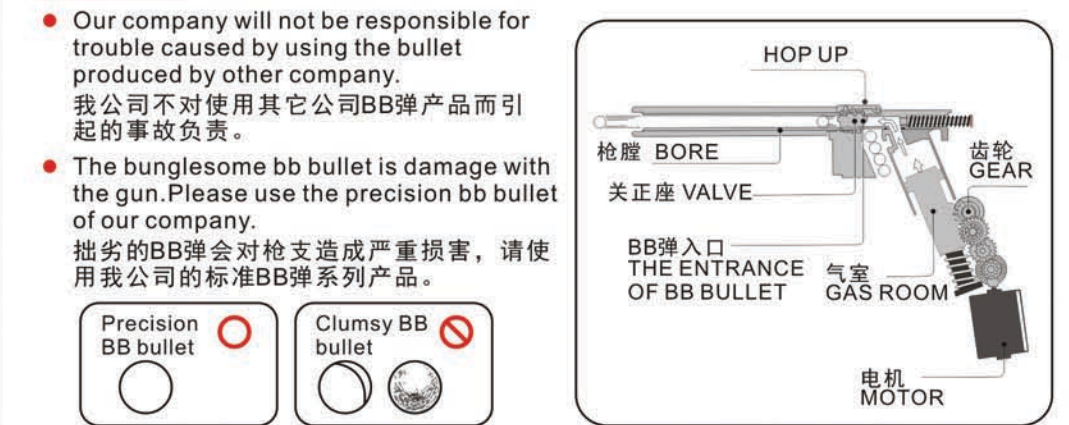

6.射击 SHOT

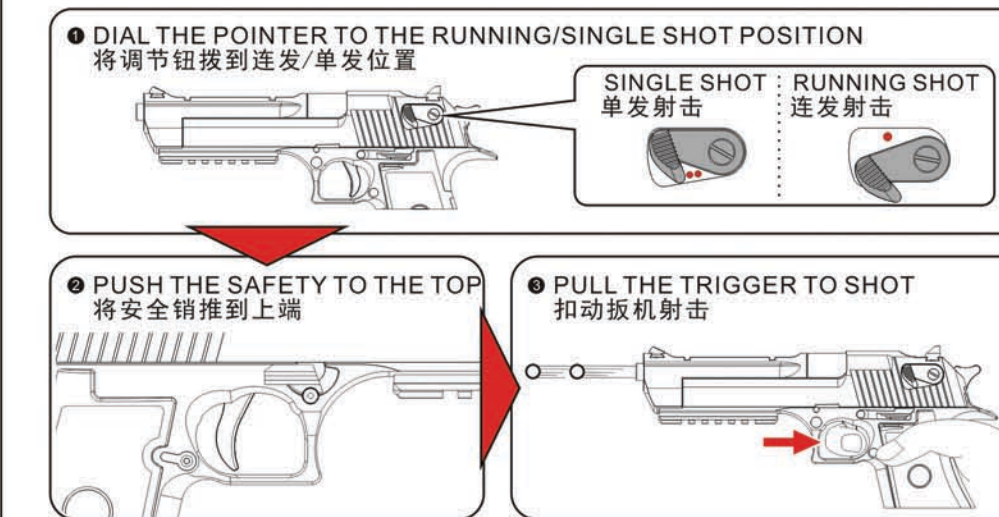

7.清除阻塞BB弹 REMOVE CLOGGED BULLETS



THE COMPOSITION OF CM.121

