

電動氣彈槍

FULL SEMIAUTO

CM.123

請仔細閱讀說明書




在操作之前必讀請熟讀這些說明書
Always read through this manual before operation.


警告 WARNING	
	18岁以上才能使用 Only for 18 years of age or older
	因为BB弹能达到50-60米范围, 不小心的射击可能导致眼睛受伤或其它伤害。 Injury caution Since plastic BB bullets reach 50 to 60 meters, careless shooting may cause eye damage or other injuries.
	在操作之前必讀請熟讀這些說明書 Always read through this HANDLING CAUTION AND INSTRUCTION MANUAL carefully before operation. Operate the air gun with full recognition of warnings and cautions.

FOR AGES:18 AND UP

電池與充電器 ACCUMULATOR AND CHARGER

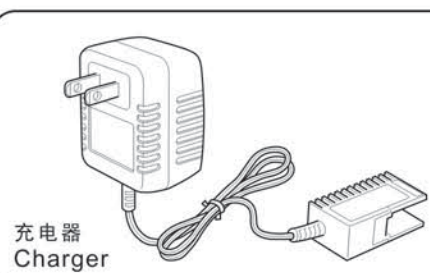


充電器
Charger

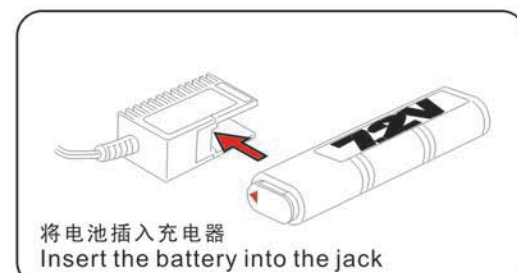

將電池插入充電器
Insert the battery into the jack

1.各部分名稱 NAME OF EACH PART

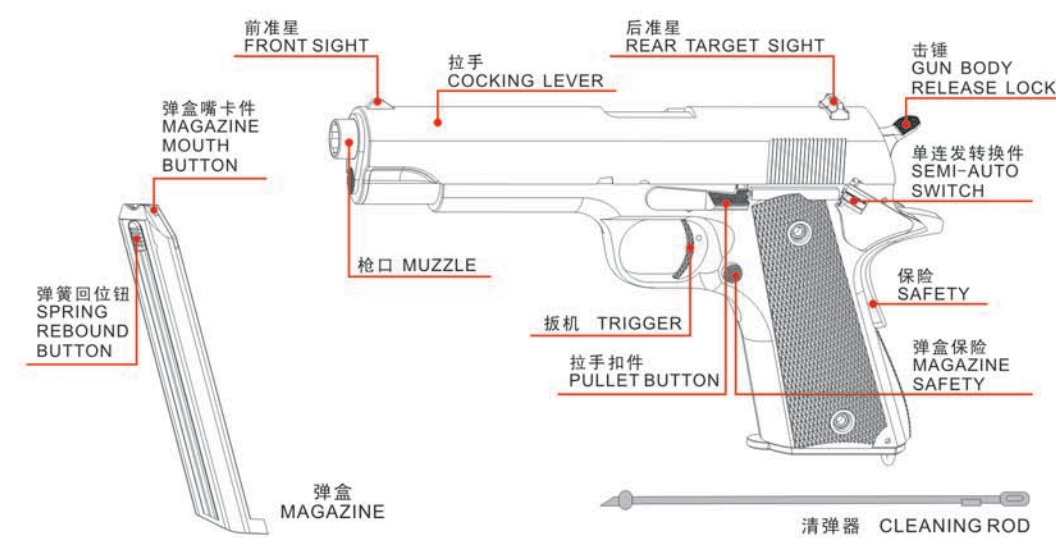


2.保險銷 SAFETY



-1-

3.充電電池 ACCUMULATOR


- Press the puller button to unload down the puller.
用手指按下拉手扣件卸下拉手。

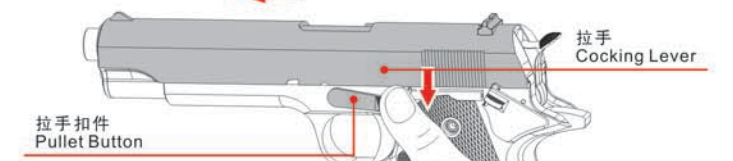

- Install the battery in the battery case.
將電池裝入電池座。



- Then cover the gun body.
再將拉手蓋上。

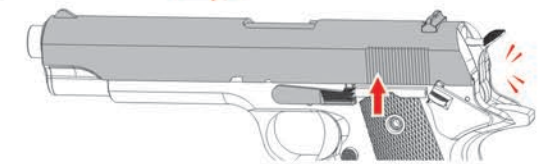

4.單發\連發 SINGLE RUNNING SHOOT



Single shoot position 單發位置		Single shoot: The button point upward, one bullet shoot out one time. 單發: 將按鈕撥向單發位置, 射擊時每次只發一彈。
Running shoot position 連發位置		A running shoot: The button point downward, more bullets shoot out one time. 連發: 將按鈕撥向連發位置, 射擊時可連續發射多彈。


-2-

5.安裝\拆卸彈倉 INSTALL DISASSEMBLE THE MAGAZINE


- Press the magazine release button to release the magazine.
按住彈倉拆卸鈕拆卸彈倉。



- Load 6mm BB bullets into the magazine.
裝入6mm BB彈。

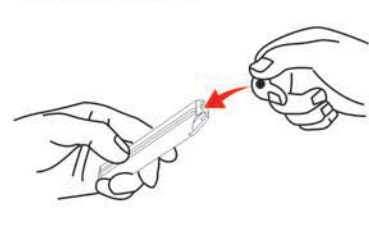


- Adjust the parabola regulate button to adjust the direction of the parabola.
通過調節拋物線調節鈕調節拋物線的方向。

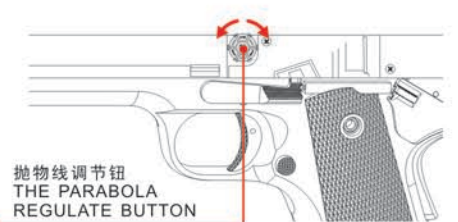

- Push the magazine into the gun till a click sound heard.
將彈倉推入槍身直至聽到“咔嚓”一聲。



- The best position is where the bullets fly horizontally, and the longest range is obtained.
保持水平方向的射擊能夠使BB彈獲得最遠射程。

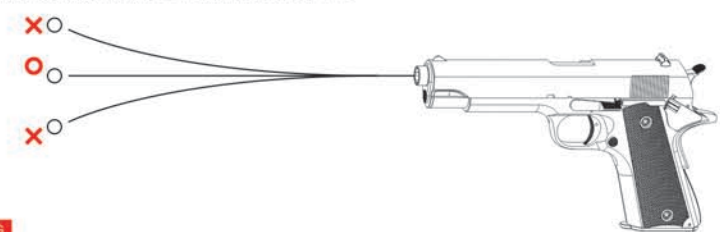


CAUTION 注意

WARNING 警告

- Our company will not be responsible for trouble caused by using the bullet produced by other company.
我公司不對使用其它公司BB彈產品而引起的事務負責。


- The bunglesome bb bullet is damage with the gun. Please use the precision bb bullet of our company.
拙劣的BB彈會對槍造成嚴重損害, 請使用我公司的標準BB彈系列產品。

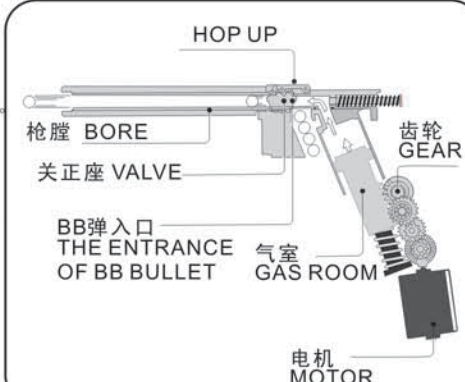


-3-

6.射擊 SHOT


- Set semi-auto switch in semi or auto position.
將單連發轉換件撥在單發或連發位置。

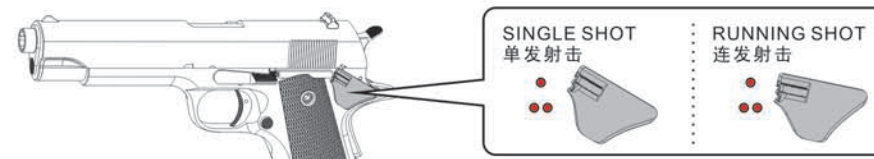

- Push the safety to the top.
將安全鎖擡至底部。

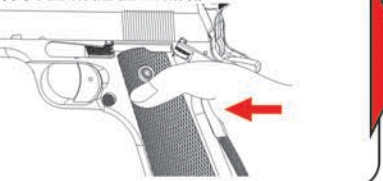

- Pull the trigger to shot.
扣動扳機射擊。

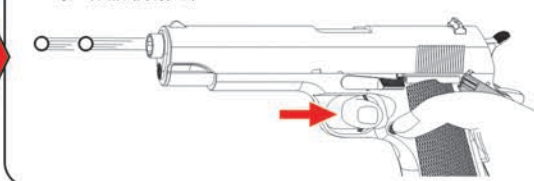


7.清除阻塞BB彈 REMOVE CLOGGED BULLETS

1.清通槍膛 CLEAN THE BORE



2.清除阻塞BB彈 REMOVE CLOGGED BULLETS

- Will cleaning rod to insert a gun tube.
將清彈器插入槍管。

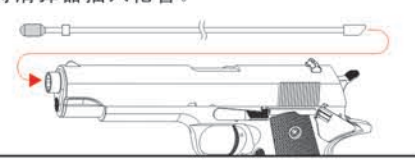


- Remove the clogged bullets.
清除阻塞的BB彈。




3.電機的微調 ELECTRICAL ENGINEERING OF TINY ADJUST

ONLY WHEN THE MOTOR NOISE BECOMES HIGH AFTER OPERATIONS FOR A LONG PERIOD OF TIME, CONDUCT THE FINE ADJUSTMENT AS SHOWN.
若使用時間過長, 電機發出很大的噪音時, 請按如圖所示對電機進行微調。

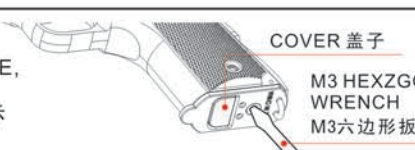

-4-

THE COMPOSITION OF CM.123

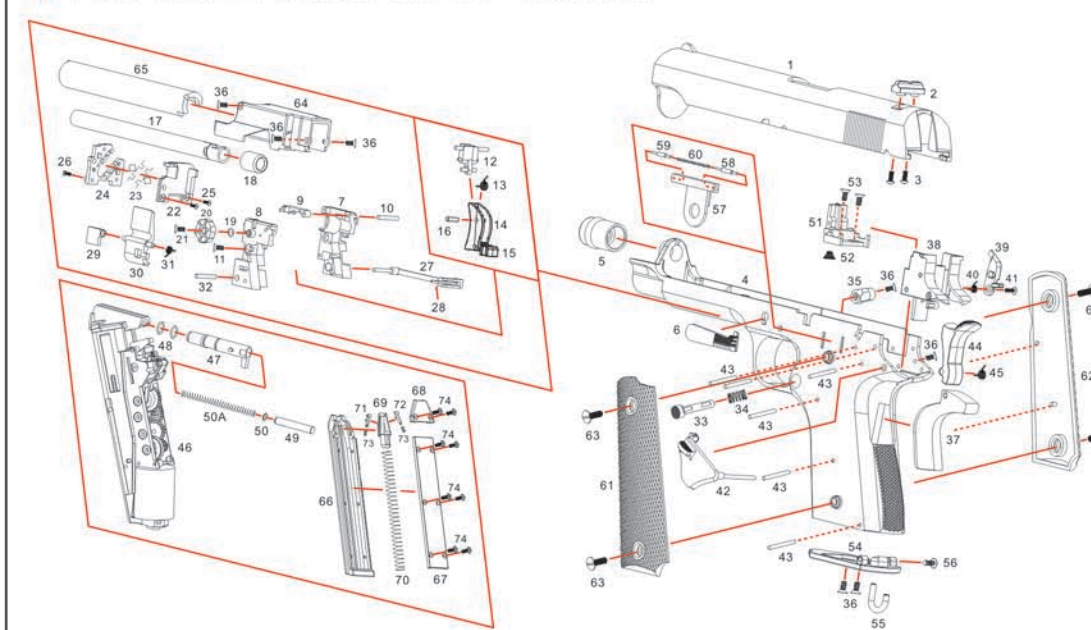

1. Puller	1. 拉手	39. Safety driver	39. 保險傳動件
2. Rear sight	2. 後準星	40. Safety spring	40. 保險彈簧
3. Ø2.3x5 PWAHO	3. Ø2.3x5 PWAHO	41. M2x4 PWMHO D=5.5	41. M2x4 PWMHO D=5.5
4. Gun body	4. 主體	42. Single shot switch	42. 單連發轉換件
5. Gun tip	5. 槍頭	43. Ø2x29 shaft	43. Ø2x29 單花鐵軸
6. Puller button	6. 拉手扣件	44. Gun body release button	44. 槍身釋放鈕
7. Right hop-up base	7. 右過只座	45. Spring	45. 彈簧
8. Left hop-up base	8. 左過只座	46. Gear box	46. 齒箱
9. Hop-up adjust	9. 過只調節片	47. Loading sets	47. 上膛套
10. Ø1.5x12.5 shaft	10. Ø1.5x12.5 花軸	48. O type ring	48. O型圈
11. M3x12 KMHO	11. M3x12 KMHO	49. Chamber cover guide nail	49. 彈倉蓋導釘
12. Sliding handle driver	12. 扳機傳動件	50. Chamber cover guide nail O-rings	50. 彈倉蓋導釘 O型圈
13. Trigger torsional spring	13. 扳機扭簧	50A. Loading rear base	50A. 上膛回位黃
14. Trigger	14. 扳機	51. Loading rear base	51. 上膛回位黃
15. Trigger backseat	15. 扳機後座	52. Spring	52. 彈簧
16. Ø2x7 shaft	16. Ø2x7 單花鐵軸	53. M3x8 KMHO	53. M3x8 KMHO
17. Inner barrel	17. 槍內管	54. Magazine base	54. 彈匣底座
18. Hop-up rubber	18. 過只橡膠	55. Magazine base	55. 彈匣底座裝飾件
19. Hop-up "O" type rubber	19. HOP-UP調節 O型圈	56. M2.5x7 PMHO	56. M2.5x7 PMHO
20. Hop-up adjust button	20. HOP-UP調節鈕	57. Single-running iron axle base	57. 單連發鐵軸固定座
21. M2x5 KMHO	21. M2x5 KMHO	58. Single-running shot stepper axle 1	58. 單連發台階軸1
22. Battery base	22. 電池底座	59. Single-running shot stepper axle 2	59. 單連發台階軸2
23. Battery base copper slice	23. 電池座銅片	60. Single auto spring	60. 單連發彈簧
24. Battery cover	24. 電池蓋	61. Left grip cover	61. 左貼片
25. Ø2x5 KBHO	25. Ø2x5 KBHO	62. Right grip cover	62. 右貼片
26. M2x8 KMHO	26. M2x8 KMHO	63. Ø4x6 CBHO Ø	63. Ø4x6 CBHO Ø
27. Driving lever	27. 扳機	64. Hop-up cover	64. 過只罩
28. Clutch	28. 离合器	65. Barrel cover	65. 槍管蓋
29. Unload battery button	29. 電池卸座扣件	66. Magazine main body	66. 彈匣主體
30. Battery remove base	30. 電池卸座扣件	67. Magazine cover	67. 彈匣蓋
31. Battery remove base spring	31. 電池卸座扣件彈簧	68. Magazine mouth cover	68. 彈匣口蓋
32. Ø3x29 shaft	32. Ø3x29 鐵軸	69. Bullet loading tip	69. 彈頭
33. Magazine press	33. 彈匣壓簧	70. Spring	70. 彈簧
34. Magazine withhold spring	34. 彈匣壓簧	71. Left block	71. 左嘴卡件
35. Magazine fastener	35. 彈匣扣件	72. Right block	72. 右嘴卡件
36. M2x6 KMHO	36. M2x6 KMHO	73. Spring	73. 彈簧
37. Safety accessories	37. 安全配件	74. M2x5 KMHO	74. M2x5 KMHO
38. Chamber base	38. 膛底		

-5-