


# WARNING: BEFORE USAGE, THE INSTRUCTION MUSE BE READ.


THANK YOU FOR PURCHASING. THE FOLLOWING ATTENTION POINTS AND INSTRUCTIONS MUST BE READ. SHOOTING WITHOUT CAUTION OR USED IMPROPERLY, BLINDNESS OR INJURIES COULD BE LEAD.

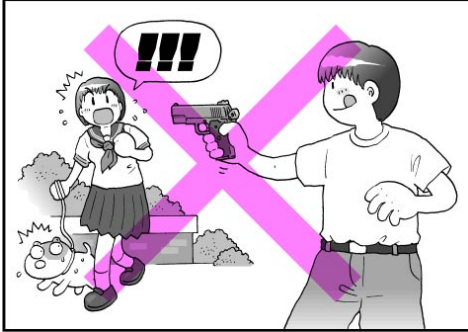

DO NOT POINT AT PEOPLE OR ANIMAL.




GUN AND GAS MUST NOT BE PLACED IN AREA WHERE TEMPERATURE IS OVER 40 °C

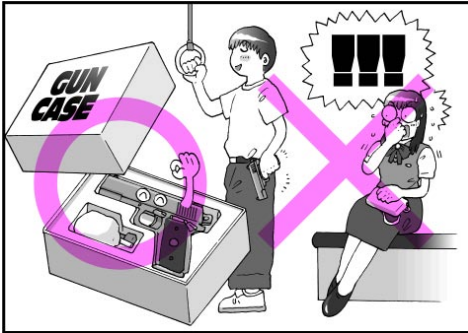

PLACE IN GUN CASE WHEN NOT IN USING OR TRANSPORTING



DO NOT USE GAS WHICH PRESSURE IS OVER 12 Kgs/cm<sup>2</sup>

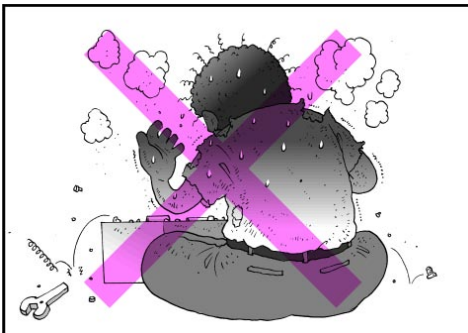

UNAUTHORIZED RECONSTRUCTION OF AIR SOFT GUN TO STRENGTHEN FIRING FUNCTION IS STRICTLY PROHIBITED.




BE CAREFULL WHAT TARGET YOU SHOOT



EYE PROTECTION DEVICE MUST BE EQUIPPED



DO NOT LOAD ANYTHING BUT BB BULLETS.

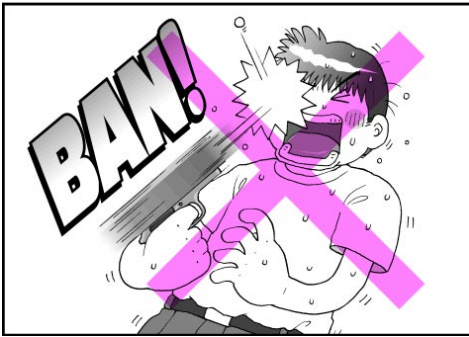

DO NOT LOOK THROUGH THE BARREL



PLEASE SHOOT IN SAFE PLACE


## OPERATION

### 1. REMOVE THE MAGAZINE



PRESS MAGAZINE CATCH AND REMOVE MAGAZINE

### 2. FILLING GAS

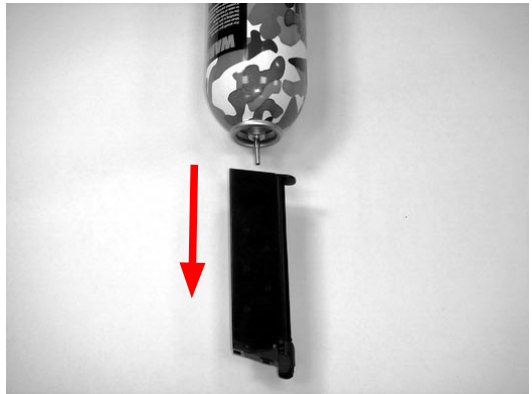

FILL THE GAS BOTTLE TO THE MAGAZINE IN VERTICAL DIRECTION.

### 3.LOAD BB BULLETS




USE WRENCH TO HOLD THE FOLLOWER AND LOAD BULLETS

### 4.INSERT MAGAZINE



### 5.LOAD

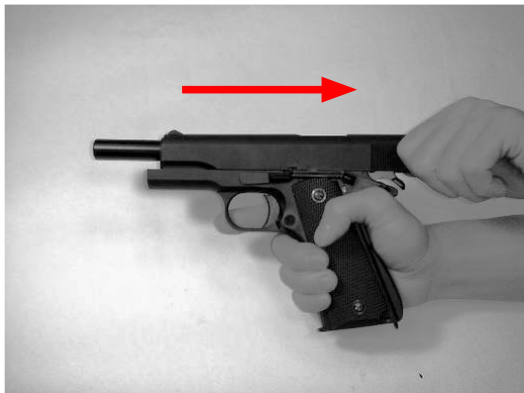


PULL THE SLIDE COMPLETELY TO THE REAR.

### 6.FIRE



PULL THE TRIGGER.

### 7.SAFETY

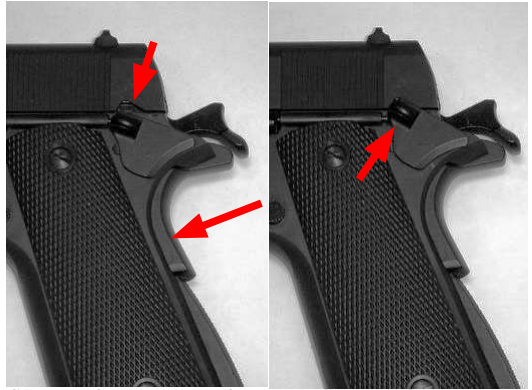

SAFETY OFF (READY FOR FIRE)

SAFETY ON

## DISASSEMBLY

1 REMOVE THE SLIDE STOP



THE SLIDE REAR UNTIL THE TAKEDOWN NOTCH IS JUST ABOVE THE SLIDE STOP TAB AND REMOVE SLIDE STOP

## 2.REMOVE THE SLIDE



## 3.REMOVE THE RECOIL SPRING AND SPRING CAP




## 4.REMOVE THE BARREL BUSH AND BARREL



USE WRENCH TO ROTATE THE BARREL BUSH AND REMOVE IT

## 5.REMOVE THE BARREL

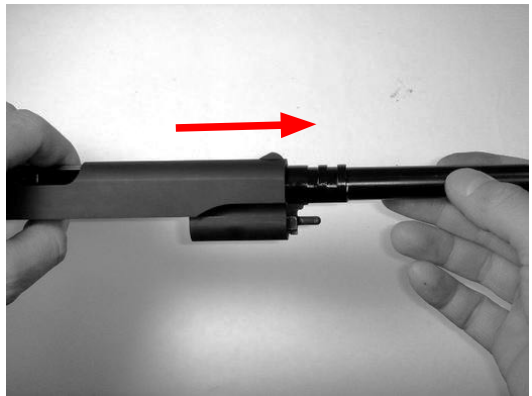


## ASSEMBLY

REVERSE THE DISASSEMBLY ORDER  
ADJUST TREJECTORY




TWIST THE ADJUST DIAL TO ADJUST TEAJECTORY.

PLEASE ADJUST ACCORDING TO TREJECTORT

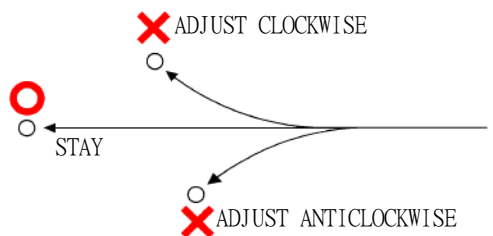


# 1911 EXPLODED DRAWING

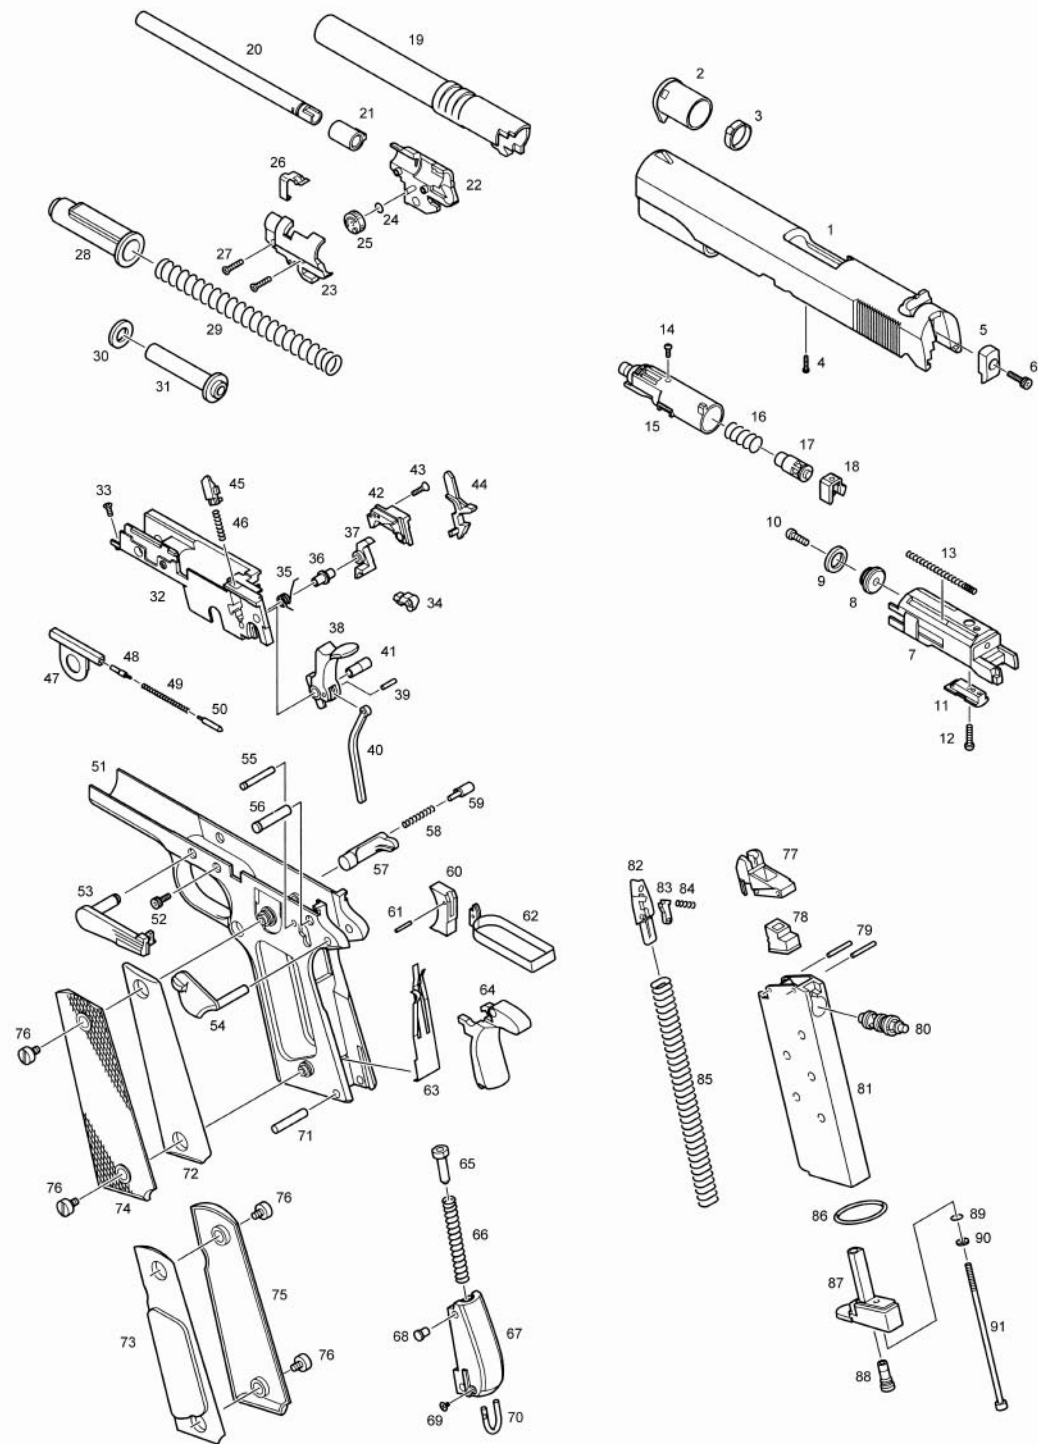

No.	Name of Part	Price	No.	Name of Part	Price
1	Slide	1600	47	Plunger Guide	120
2	Barrel Bushing	120	48	Slide Stop Plunger	50
3	Support Ring	50	49	Plunger Spring	15
4	Cylinder Screw	10	50	Safety Plunger	50
5	Firing Pin Stop	100	51	Frame	2200
6	Firing Pin Stop Screw	20	52	Frame Screw	10
7	Cylinder	400	53	Slide Stop	200
8	Ring Head	40	54	Safety	140
9	Ring	20	55	Sear Pin	40
10	Ring Head Screw	10	56	Hammer Pin	40
11	Piston Part	30	57	Magazine Catch	120
12	Piston Part Screw	10	58	Magazine Catch Spring	10
13	Cylinder Return Spring	20	59	Magazine Catch Lock	30
14	Cylinder Screw	10	60	Trigger	120
15	Cylinder	150	61	Trigger Pin	10
16	Cylinder Valve Spring	20	62	Trigger Bar	120
17	Cylinder Valve	20	63	Sear Spring	100
18	Cylinder Valve Stopper	20	64	Grip Safety	240
19	Outter Barrel	600	65	Hammer Spring Plunger	30
20	Inner Barrel	180	66	Hammer Spring	70
21	Rubber Chamber	80	67	Hammer Spring Housing	240
22	Chamber Cover (Right)	140	68	Plunger Stopper	40
23	Chamber Cover (Left)	140	69	Lanyard Loop Screw	10
24	O-Ring	10	70	Lanyard Loop	50
25	Adjust Dial	20	71	Housing Pin	50
26	Adjust Lever	50	72	Grip Weight (Left)	100
27	Chamber Cover Screw	10	73	Grip Weight (Right)	100
28	Recoil Plug	200	74	Grip (Left)	80
29	Recoil Spring	60	75	Grip (Right)	80
30	Recoil Spring Pad	20	76	Grip Screw	30
31	Recoil Spring Guide	150	77	BB Lip	60
32	Front Chasis	300	78	Magazine Gasket	80
33	Front Chasis Screw	10	79	BB Lip Pin	10
34	Knocker	40	80	Valve	150
35	Knocker Spring	30	81	Magazine Case	400
36	Sear Sleeve	40	82	Follower	30
37	Sear	60	83	Follower Lever	20
38	Hammer	150	84	Follower Lever Spring	15
39	Hammer Strut Pin	10	85	Follower Spring	50
40	Hammer Strut	50	86	O-Ring	20
41	Hammer Sleeve	50	87	Magazine Bottom	180
42	Chassis Cover	80	88	Filling Valve	70
43	Chassis Cover Screw	10	89	O-Ring	10
44	Disconnecter	80	90	Washer	10
45	Knocker Lock	50	91	Magazine Base Screw	20
46	Knocker Lock Spring	20			

# 1911 MANUAL

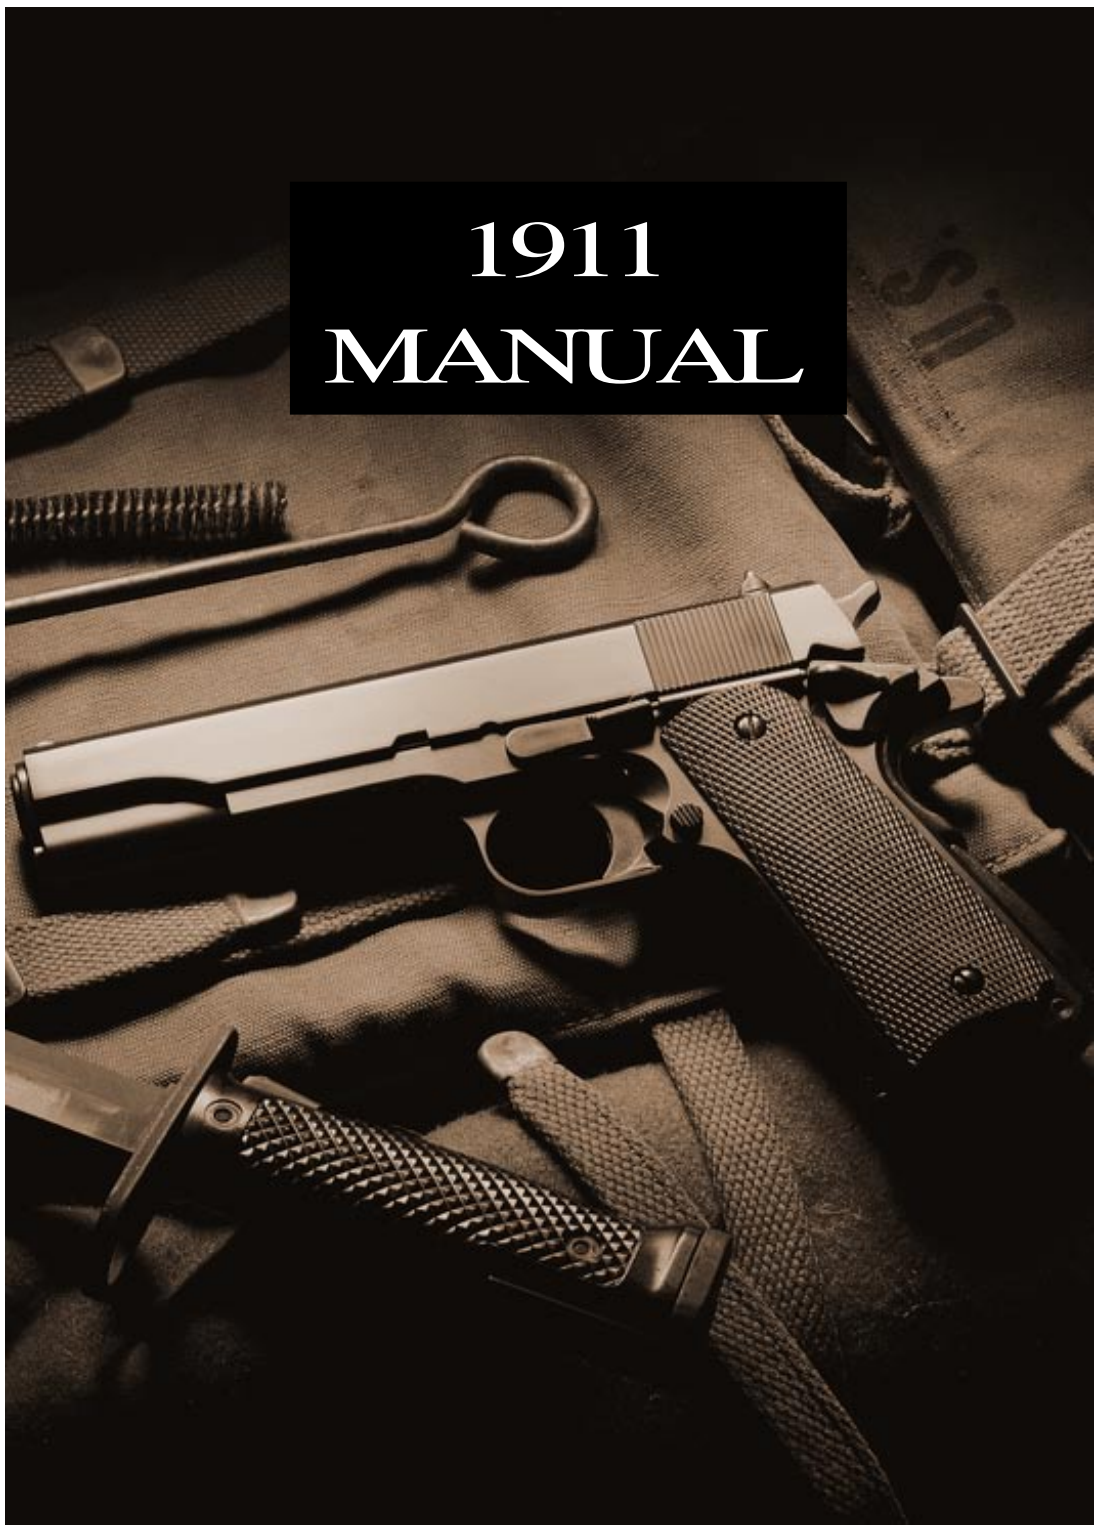

KJWORKS